


LABEL/RECEIPT PRINTING SCALE

NETS

OPERATING MANUAL TARE VER 1.0

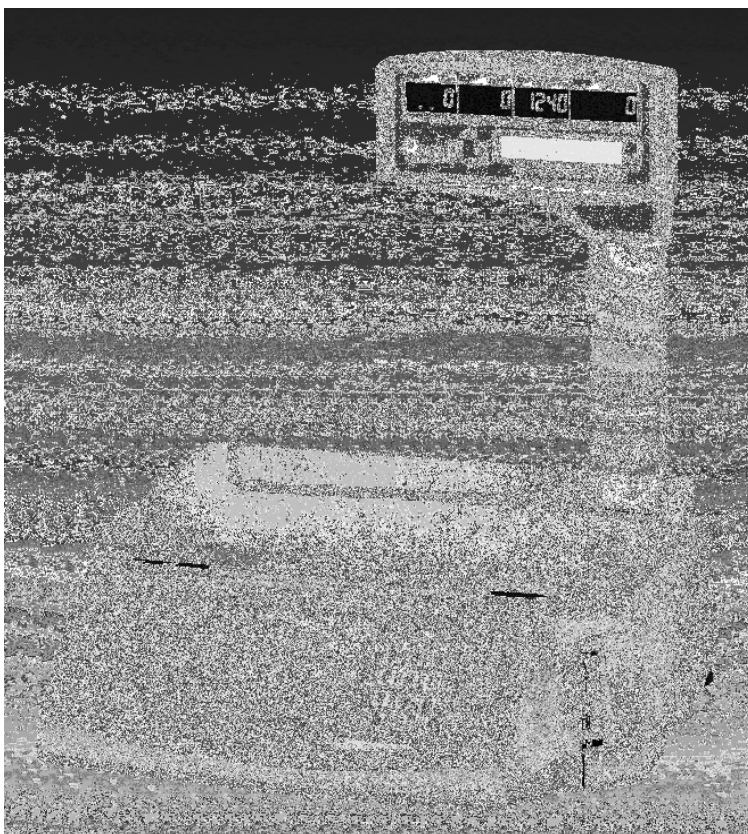

VER 1.00

TABLE OF CONTENTS

General

| | |
|-----------------------------|---|
| Introduction | 1 |
| Specifications | 1 |
| Options & Accessories | 2 |

Unpacking & Assembly

| | |
|------------------------------|---|
| Box Contents | 3 |
| Assembling the Display | 4 |

Nomenclature

| | |
|------------------------------------|----|
| Scale Overview | 4 |
| Displays | 7 |
| Printer & Label Installation | 8 |
| Numeric Keypad | 11 |
| Speed Keys | 12 |
| Alpha Keypad | 12 |

Proper Operation

| | |
|------------------------------|----|
| Do's & Don'ts | 14 |
| Location & Environment | 15 |
| Maintenance | 15 |
| Power Requirements | 17 |

Set Up

| | |
|-------------------|----|
| Quick Start | 18 |
| Password | 20 |

Program Mode

| | |
|-----------------------------------|----|
| Main Menu | 21 |
| P1. Creating & Editing PLUs | 23 |
| P2. Speed Keys | 31 |
| P3-1. Store Name & Address | 32 |
| P3-2. Groups | 32 |
| P3-3. Operators | 33 |
| P3-4. Sale Message(Receipt) | 34 |
| P3-5. Tax(Receipt) | 36 |
| P4. Time & Date | 38 |
| P5-2. Group Assignment | 38 |
| P5-3. Scale Number | 39 |
| P5-4. Date Format | 39 |

| | |
|--|----|
| P5-5. Backlight Setting | 39 |
| P5-6. Barcode Setting | 40 |
| P5-7. Select User(Receipt) | 42 |
| P5-8. Feed Length(Receipt) | 43 |
| P5-9. Price Rounding(Receipt) | 43 |
| P5-10. Operator Assignment | 44 |
| P5-11. Sales MSG Assignment (Receipt) | 44 |
| P5-12. Input Scale Counter | 45 |
| P5-13. Sale Function Setting | 45 |
| P6. Account Report | 46 |
| P6-1,2. X1- Report, X2-Report | 46 |
| P6-3. Z-Report | 52 |
| P7-1. Select Label or Receipt | 54 |
| P7-2. Set Label Length | 55 |
| P7-3. Set Label Gap | 55 |
| P7-4. Set Peel off Sensor | 56 |
| P7-5. Label Peel Adjustment (Label) | 56 |
| P7-6, 7. Gap & Peel off Threshold | 58 |
| P7-8. Label Format Setting | 58 |
| P7-9. Print Field | 59 |
| P7-10. Select Print Speed | 61 |
| P7-11. Select Print Brightness | 61 |
| P7-12. Select Print Counter | 61 |
| P7-13. Senser Setting | 62 |
| P8-1. Self Test | 63 |
| P8-2. Print PLU List | 63 |
| P8-3. Scale to Scale Data Transfer | 64 |
| P8-4. PLU Temporary Price Change Setting | 65 |
| P8-6. PLU Memory Status | 66 |
| P8-7. Deleting PLU | 66 |
| P8-8. Deleting All PLUs | 67 |
| P8-9. Password Change | 67 |
| PLU Quick Price Change | 68 |
| Temporary Date Print Inhibit | 69 |
| Select Format | 69 |
| Label / Receipt | 69 |
| Account | 70 |

Sales Mode

Change Initial State Display 70
PLU Key & Calling Up PLUs 71
Zero Key 73
Tare Key 73
Save Key(Label)74
Auto Key(Label) 75
Set Key 76
Label/Receipt Key 76
REFUND/Esc Key..... 76
ADD Key 77
X/Sub Total Key 78
For Key 78
Clear Key 79
Feed Key 80
Print Key 81
Void Function 82
Discount Function (Receipt)82
Change & Tender Print (Receipt) 83
Multi User Operation (Receipt) 83

Advanced Topics

PC-to-Scale Data Transfer 85

Appendix A: Label Format Library 86

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/acom/NETS TARE operating manual.html>

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)