



---

Adam Equipment

**AE 402  
Indicator**

(P.N. 3106610631, Revision B1, October 2010)

# CONTENTS

1.0	INTRODUCTION.....	2
2.0	SPECIFICATIONS .....	3
3.0	INSTALLATION.....	4
3.1	LOCATING THE SCALES .....	4
3.2	LIST OF ACCESSORIES .....	4
3.3	SETTING UP THE SCALES.....	5
3.4	CONNECTIONS .....	5
	<b>3.4.1 CONNECTION OF LOAD CELL .....</b>	<b>5</b>
	<b>3.4.2 CONNECTION OF RS-232 .....</b>	<b>6</b>
	<b>3.4.3 CONNECTION OF RELAY DRIVERS.....</b>	<b>6</b>
4.0	KEY DESCRIPTIONS.....	7
5.0	DISPLAYS.....	8
6.0	OPERATION .....	9
6.1	ZEROING THE DISPLAY .....	9
6.2	TARING .....	9
6.3	WEIGHING A SAMPLE .....	10
6.4	PARTS COUNTING.....	11
6.5	CHECK-WEIGHING .....	12
6.6	ACCUMULATED TOTAL.....	15
6.7	PERCENT WEIGHING.....	16
6.8	ANIMAL (Dynamic) WEIGHING .....	18
	<b>6.8.1 ANIMAL WEIGHING PROCEDURE.....</b>	<b>19</b>
7.0	USER PARAMETERS .....	20
7.1	CHECK WEIGHING PARAMETERS.....	20
7.2	PERCENT WEIGHING and ANIMAL WEIGHING.....	21
7.3	RS-232 PARAMETERS.....	22
7.4	SCALE PARAMETERS .....	23
8.0	BATTERY OPERATION .....	25
9.0	RS-232 INTERFACE.....	26
9.1	INPUT COMMANDS FORMAT .....	29
10.0	RELAY INTERFACE.....	30
11.0	CALIBRATION .....	31
12.0	SERVICE SECTION .....	32
12.1	USING “1000” TO ENTER THE SERVICE PARAMETERS.....	32
12.2	USING “2006” TO ENTER THE SECURE PARAMETERS .....	33
12.3	PARAMETER DETAILS .....	34
	<b>12.3.1 F1 -CALIBRATION .....</b>	<b>34</b>
	<b>12.3.2 F2-DECIMAL POINT POSITION .....</b>	<b>34</b>
	<b>12.3.3 F3 – CAPACITY/ WEIGHING UNIT/INCREMENT .....</b>	<b>35</b>
	<b>12.3.4 F4 –INITIAL ZERO RANGE .....</b>	<b>36</b>
	<b>12.3.5 F5 -RE-ZERO RANGE.....</b>	<b>36</b>
	<b>12.3.6 F6 -SUCCESSIVE TARE.....</b>	<b>36</b>
	<b>12.3.7 F7 –ADC COUNTS .....</b>	<b>36</b>
	<b>12.3.8 F8 –ZERO MODE.....</b>	<b>36</b>
	<b>12.3.9 F9 –LOW VOLTAGE DETECTION .....</b>	<b>37</b>
	<b>12.3.10 FA –AZn Auto Zero Range.....</b>	<b>37</b>
	<b>12.3.11 Fb –FPS User Function Password .....</b>	<b>37</b>
13.0	ERROR CODES .....	38
14.0	REPLACEMENT PARTS AND ACCESSORIES .....	39
15.0	SERVICE INFORMATION.....	39
16.0	WARRANTY STATEMENT.....	40

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/adam equipment/AE-402 Indicator user manual.h](https://the-checkout-tech.com/manuals/adam%20equipment/AE-402%20Indicator%20user%20manual.h)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)