




CBDa SERIES

(P.N. 6242, Revision A9, June 2007)

Software revision: 1.4-1.16

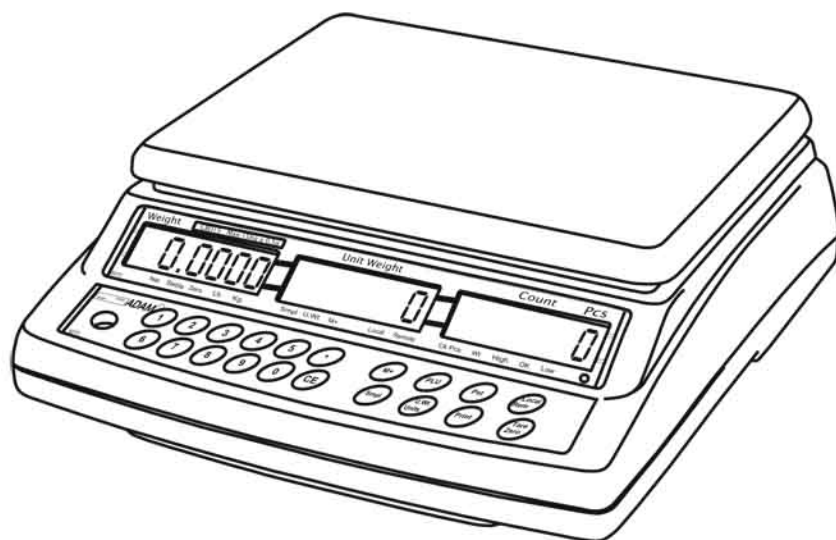

CONTENTS

1.0	INTRODUCTION	2
2.0	TECHNICAL SPECIFICATIONS.....	3
2.1	SPECIFICATIONS FOR THE LOCAL SCALE	3
2.2	SPECIFICATIONS FOR THE REMOTE SCALE.....	3
2.3	COMMON SPECIFICATIONS.....	4
3.0	INSTALLATION	5
3.1	LOCATING THE SCALES.....	5
3.2	SETTING UP THE SCALES.....	5
	REMOTE SCALE SET UP	7
4.0	KEY DESCRIPTIONS.....	8
5.0	DISPLAYS	9
5.1	WEIGHT WINDOW	9
5.2	UNIT WEIGHT WINDOW	10
5.3	COUNT WINDOW	10
6.0	OPERATION.....	11
6.1	ZEROING AND TARING THE DISPLAY	12
	TARING THE REMOTE SCALE	13
6.2	MEMORY FUNCTIONS	14
6.2.1	Manual accumulation.....	14
6.2.2	Automatic accumulated total	14
6.3	PARTS COUNTING	15
6.3.1	Weighing a sample to determine the Unit Weight	15
6.3.2	Entering a known Unit Weight	16
6.3.3	Automatic update of unit weight	16
6.3.4	Count pre-set or check-weighing.....	17
6.4	PLU (Product Look Up)	18
6.4.1	STORING PLU'S MANUALLY	18
6.4.2	ENTERING DESCRIPTION MANUALLY	20
6.4.3	RECALLING PLU'S MANUALLY	21
7.0	PARAMETERS	22
7.1	USER PARAMETERS.....	22
8.0	BATTERY OPERATION	24
9.0	RS-232 OUTPUT	25
9.1	INPUT COMMANDS FORMAT	26
9.2	STORING DATA VIA RS232.....	27
9.3	PLU ENTRY USING RS-232 INTERFACE.....	27
10.0	CALIBRATION	28
11.0	ERROR CODES	29
12.0	TECHNICAL PARAMETERS.....	30
13.0	REPLACEMENT PARTS AND ACCESSORIES.....	32
14.0	SERVICE INFORMATION	32

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*