

AEADAM[®]

Adam Equipment

CPW_{plus} RANGE OF SCALES

(P.N. 9428, Rev. C, June 2008)

CONTENTS

1.0	INTRODUCTION.....	3
2.0	SPECIFICATIONS	4
3.0	INSTALLATION.....	7
3.1	UNPACKING	7
3.2	LOCATING	8
3.3	SETTING UP	9
3.3.1	SETTING UP THE STANDARD CPW _{plus} SERIES	9
3.3.2	SETTING UP THE CPW _{plus} P SERIES (FOR USA ONLY)	10
3.3.3	SETTING UP THE CPW _{plus} M & CPW _{plus} L SERIES.....	11
3.3.4	SETTING UP THE CPW _{plus} W SERIES	12
4.0	KEYPAD.....	13
5.0	DISPLAY	13
6.0	SYMBOLS AND INDICATORS	13
7.0	BATTERY.....	14
8.0	BACKLIGHT	14
9.0	AUTO POWER OFF	14
10.0	OPERATIONS.....	14
10.1	SWITCHING ON THE SCALE.....	14
10.2	ZEROING	15
10.3	TARING	15
10.4	SELECTING THE UNIT	16
10.5	WEIGHING	16
11.0	RS-232 INTERFACE.....	17
12.0	CALIBRATION	18
13.0	PARAMETER SETTING	19
13.1	USER PARAMETERS	19
13.1.1	AUTO POWER OFF.....	20
13.1.2	SETTING OF BACKLIGHT.....	20
13.1.3	ENABLING OF UNITS.....	21
13.1.4	COMMUNICATION ADDRESS	21
13.1.5	SELECTION OF BAUD RATE.....	22
13.1.6	SELECTION OF BIT RATE AND PARITY.....	22
13.1.7	SELECTION OF TRANSMISSION MODE	23
13.1.8	SELECTION OF HOLD FUNCTION.....	23
13.1.9	SETTING OF HOLD TIME LIMIT	24
13.2	TECHNICAL PARAMETERS.....	25
13.2.1	FILTER	26
13.2.2	ZERO TRACKING	26
13.2.3	STABILIZATION RANGE	26
13.2.4	STABILIZATION TRACKING	27
13.3	FACTORY PARAMETERS.....	27
14.0	ERROR MESSAGES	28
15.0	REPLACEMENT PARTS AND ACCESSORIES	28
16.0	SERVICE INFORMATION	29
17.0	WARRANTY INFORMATION.....	30
18.0	APPENDIX.....	31

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*