



CPW_{plus} RANGE OF SCALES

(P.N. 9009, Rev. C, June 2008)

CONTENTS

1.0	INTRODUCTION.....	3
2.0	SPECIFICATIONS	4
3.0	INSTALLATION.....	5
3.1	UNPACKING	5
3.2	LOCATING	6
3.3	SETTING UP	7
3.3.1	SETTING UP THE STANDARD CPW _{plus} SERIES	7
3.3.2	SETTING UP THE CPW _{plus} M & CPW _{plus} L SERIES.....	8
4.0	KEYPAD.....	9
5.0	DISPLAY	9
6.0	SYMBOLS AND INDICATORS	9
7.0	BATTERY.....	10
8.0	BACKLIGHT	10
9.0	AUTO POWER OFF	10
10.0	OPERATIONS.....	11
10.1	SWITCHING ON THE SCALE.....	11
10.2	ZEROING	11
10.3	TARING	12
10.4	SELECTING THE UNIT	13
10.5	WEIGHING	13
11.0	RS-232 INTERFACE.....	13
12.0	CALIBRATION	15
13.0	PARAMETER SETTING	16
13.1	USER PARAMETERS	16
13.1.1	AUTO POWER OFF.....	17
13.1.2	SETTING OF BACKLIGHT.....	17
13.1.3	ENABLING OF UNITS.....	18
13.1.4	COMMUNICATION ADDRESS	18
13.1.5	SELECTION OF BAUD RATE.....	19
13.1.6	SELECTION OF BIT RATE AND PARITY.....	19
13.1.7	SELECTION OF TRANSMISSION MODE	20
13.1.8	SELECTION OF HOLD FUNCTION.....	20
13.1.9	SETTING OF HOLD TIME LIMIT	21
13.2	TECHNICAL PARAMETERS.....	22
13.2.1	FILTER	23
13.2.2	ZERO TRACKING	23
13.2.3	STABILIZATION RANGE	23
13.2.4	STABILIZATION TRACKING	24
13.3	FACTORY PARAMETERS.....	24
14.0	ERROR MESSAGES	25
15.0	REPLACEMENT PARTS AND ACCESSORIES	25
16.0	SERVICE INFORMATION	26
17.0	WARRANTY INFORMATION.....	27
18.0	APPENDIX	28

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*