


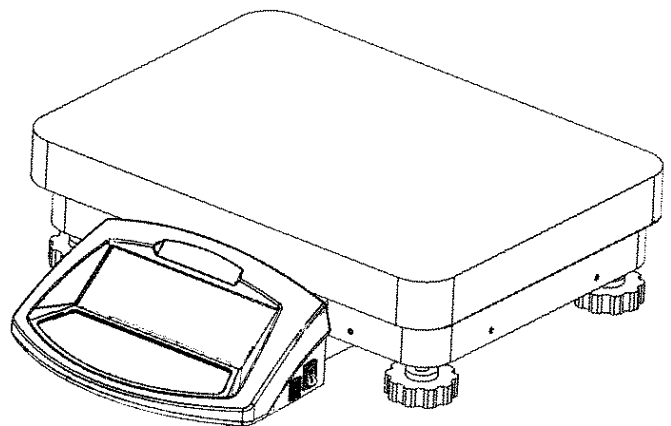

Adam Equipment

PGL SERIES

(P.N. 9326, Revision C5, March 2009)



CONTENTS

2.0	INTRODUCTION	5
3.0	SET UP	6
3.1	UNPACKING AND SETTING UP YOUR SCALE	6
3.2	ASSEMBLING THE BALANCE (PGL 203 to PGL 8001)	6
3.3	LEVELLING THE BALANCE	7
3.4	WARM-UP TIME	7
4.0	DISPLAY	9
5.0	KEYPAD	10
5.1	NUMERIC ENTRY METHOD	11
6.0	BASIC OPERATION	12
6.1	INITIALISATION	12
6.2	PASSCODES	13
6.3	WEIGHING	13
6.4	WEIGHING UNITS	14
7.0	FUNCTIONS	15
7.1	PARTS COUNTING	15
7.2	PERCENT WEIGHING	16
7.3	CHECK WEIGHING	17
7.4	DENSITY DETERMINATION	19
8.0	CALIBRATION	22
8.1	MANUAL CALIBRATION	22
8.2	AUTOMATIC CALIBRATION	23
8.3	CALIBRATION ERRORS	23
8.4	CALIBRATION REPORT	24
9.0	RS-232 INTERFACE	25
9.1	HARDWARE	25
9.2	STANDARD FORMAT	27
9.3	INPUT COMMANDS USING REMOTE KEYS	27
10.0	BATTERY OPERATION	29
11.0	ERROR CHECKING	29
12.0	SUPERVISOR MENUS	30
12.1	ENABLE WEIGHING UNITS	30
12.2	ENABLE WEIGHING MODES	31
12.3	ENABLE SERIAL INTERFACE PARAMETERS	31
12.4	SETUP PARAMETERS	33
12.5	CALIBRATION SETUP	34
12.6	PASSCODES	35
13.0	SPECIFICATIONS	36
14.0	WARRANTY STATEMENT	38

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/adam equipment/PGL Series user manual.html](https://the-checkout-tech.com/manuals/adam%20equipment/PGL%20Series%20user%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)