


## PMB Moisture Analyzer

(P.N. 9618, Revision D, June 2009)

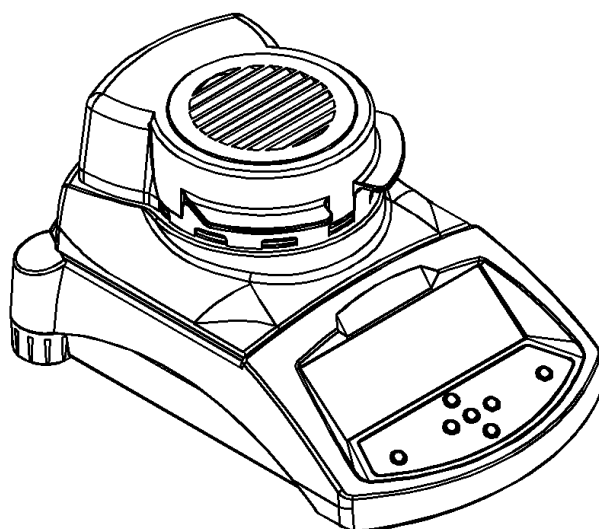

Software revisions V1.27 and up

# 1.0 CONTENTS

<b>1.0</b>	<b>CONTENTS .....</b>	<b>1</b>
<b>2.0</b>	<b>INTRODUCTION.....</b>	<b>3</b>
<b>3.0</b>	<b>SET UP .....</b>	<b>5</b>
3.1	UNPACKING AND SETTING UP YOUR ANALYZER.....	5
3.2	ASSEMBLING THE ANALYZER .....	6
3.3	LEVELLING THE ANALYZER.....	7
3.4	WARM-UP TIME .....	7
3.5	LOCATING AND PROTECTING YOUR ANALYZER.....	8
3.6	SAFETY .....	9
<b>4.0</b>	<b>DISPLAY and KEYPAD .....</b>	<b>13</b>
4.1	NUMERIC ENTRY METHOD .....	15
<b>5.0</b>	<b>REAR PANEL INTERFACES.....</b>	<b>16</b>
5.1	POWER.....	16
5.2	DATA INTERFACES.....	16
5.2.1	FILES ON A USB MEMORY DEVICE .....	17
5.3	SECURITY LOCK .....	17
6.1	SETUP OF METHOD.....	18
6.1.1	MANUALLY SETTING TEST PROCEDURES.....	20
6.1.2	PRINT CURRENT SETTINGS.....	26
6.2	STORE TEST SETTINGS.....	27
6.3	RECALL TEST SETTINGS .....	28
6.4	DELETE TEST SETTINGS .....	29
6.5	REVIEW TEST SETTINGS.....	29
6.6	STORE and RECALLING TEST SETTINGS FROM USB MEMORY.....	29
<b>7.0</b>	<b>RUNNING A TEST.....</b>	<b>33</b>
<b>8.0</b>	<b>PRINT AND STORE RESULTS.....</b>	<b>37</b>
8.1	PRINTING FINAL TEST RESULTS .....	37
8.2	STORING TEST RESULTS .....	37
8.3	RECALLING TEST RESULTS .....	38
8.4	DELETING TEST RESULTS.....	38
<b>9.0</b>	<b>STORING RESULTS IN USB MEMORY.....</b>	<b>40</b>
<b>10.0</b>	<b>ANALYZER MENUS.....</b>	<b>42</b>
10.1	SUPERVISOR MENUS .....	42
10.1.1	SERIAL INTERFACE PARAMETERS .....	44
10.1.2	SETUP PARAMETERS .....	45
10.1.3	CALIBRATION.....	47
10.1.3.1	MASS CALIBRATION.....	47
10.1.3.2	TEMPERATURE CALIBRATION.....	48
10.1.3.3	CALIBRATION REPORT .....	51
10.1.4	PASSCODES .....	52
10.1.4.1	FORGOTTEN PASSCODES.....	52
10.2	STORE AND RECALL ANALYZER SETTING FROM USB MEMORY .....	53
<b>11.0</b>	<b>SERIAL INTERFACE.....</b>	<b>56</b>
11.1	RS-232 HARDWARE .....	56
11.2	USB SERIAL HARDWARE .....	56
11.3	INPUT COMMANDS .....	57
11.4	PRINTING RESULTS.....	57
11.5	ANALYZER CONFIGURATION THROUGH THE SERIAL INTERFACE .....	60
11.5.1	TEST PARAMETERS.....	60
11.5.2	ANALYZER SETUP PARAMETERS .....	61
11.5.3	ANALYZER RECALL PARAMETERS .....	62
11.5.4	REQUEST VALUES OF PARAMETERS.....	62
11.6	CONTINUOUS OUTPUT .....	63
<b>12.0</b>	<b>SPECIFICATIONS &amp; FEATURES .....</b>	<b>64</b>
<b>13.0</b>	<b>MENU STRUCTURE.....</b>	<b>67</b>
<b>14.0</b>	<b>SAMPLE PREPARATION .....</b>	<b>73</b>
<b>15.0</b>	<b>GUIDANCE NOTES.....</b>	<b>75</b>
<b>16.0</b>	<b>WARRANTY STATEMENT .....</b>	<b>80</b>

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*