

AD-4322A

Mark II (MKII)

WEIGHING INDICATOR

INSTRUCTION MANUAL

Instruction-AD-4322AMKII-v.1.a 92.6.22

WEIGHING INDICATOR



Contents

FCC Rules	Page	v
<i>Introduction</i>		
Welcome!.....	Page	2
Features.....	Page	3
Front Panel Description	Page	4
Rear Panel Description.....	Page	10
Specifications	Page	11
<i>Installation</i>		
General Rules.....	Page	17
Load Cell Connection	Page	18
Load Cell and Input Sensitivity.....	Page	18
Quick Installation.....	Page	19
<i>Basic Operation</i>		
'lb' or 'kg' Weighing	Page	25
Simple Weighing.....	Page	25
Simple Weighing with TARE	Page	26
TARE Clear.....	Page	27
Digital TARE.....	Page	28
<i>The Main Memory TOTAL Function</i>		
M+, M- and TOTAL keys.....	Page	30
Viewing All of the Code Set Values.....	Page	31
To Clear Code Set Values.....	Page	34
Adding/Subtracting to the Main Memory Total.....	Page	36
Main Memory Total Overflow.....	Page	36
Viewing the Main Memory Total	Page	37
To Clear the Main Memory Total	Page	38
To Set Auto Main Memory Total Add Mode.....	Page	39
<i>The Comparator Function</i>		
The Comparator Function.....	Page	41
To Store Comparator Setpoints.....	Page	42
Turning the Comparator On or Off.....	Page	45
<i>The ID/TARE Function</i>		
The I.D./Tare Function	Page	47
To Store ID/Tare	Page	47
Weighing Using Stored ID/Tare (RECALLing an ID/Tare).....	Page	49
To Exit from an ID/Tare	Page	49
Viewing All of the Stored ID/Tare's	Page	50
Clearing a Stored ID/Tare.....	Page	52
To Clear All of the Stored ID/Tare's	Page	52

The Code Function

Code Function Introduction.....	Page	54
Code Setting Flowchart	Page	55
To Enter Code Set Values.....	Page	56
Editing a Code Set.....	Page	60
Viewing All of the Code Set Values.....	Page	61
To Clear Code Set Values.....	Page	64
Using The Code Function.....	Page	66
Cancel of Code Setting.....	Page	67
Using the Code Total Memory.....	Page	69
Adding/Subtracting to the Code Total	Page	69
Code Total Overflow	Page	69
Viewing a Code Total	Page	71
Viewing All of the Code Total's.....	Page	72
To Clear a Code Total	Page	74
To Clear All of the Code Total's.....	Page	76

Printout

Simple Printing	Page	78
Simple Printing Examples	Page	78
Printing Main Memory Total	Page	80
To Print a Code Total.....	Page	81
To Print all of the Code Total's.....	Page	82
Auto Print.....	Page	83
To Select Auto Print Mode	Page	83
The M+ Print Mode.....	Page	85
To Select M+ Print Mode.....	Page	85
Using the M+ Print Mode.....	Page	87
Using the M+ Print Mode with Code	Page	88
Auto M+ Print Mode	Page	89
To Select Auto M+ Print Mode	Page	89
Using the Auto M+ Print Mode	Page	92
Using the Auto M+ Print Mode with Code	Page	93
Printing Items from the Memory.....	Page	94
I.D./Tare Settings Printout.....	Page	94
Code Settings Printout	Page	95
Printing the Time (with Option OP-09).....	Page	96
F-Function Settings Printout.....	Page	96
Printout Examples	Page	97

Truck Scale Mode

Track Scale Mode.....	Page	99
Track Scale	Page	100
To Clear Zero and Tare	Page	103
To Clear all of the Stored ID/TARE'S.....	Page	103
To Clear all of the CODE TOTAL'S.....	Page	104

Backup Data Initialization	Page	104
ID/TARE Data Initialization.....	Page	105
Clearing all CodeMemory Set	Page	105
Clearing all Backup Data, ID/TARE Data and Code Memory.....	Page	106
Calibration Data Initialization.....	Page	106
F-Function Data Initialization.....	Page	107
Calibration Data and F-Function Data Initialization.....	Page	107
All Data Clear and Initalization	Page	108

Calibration

About Calibration Terms.....	Page	110
If You Want To Perform:.....	Page	111
Calibration Flowchart	Page	112
Gravity Compensation Flowchart	Page	113
Digital Linearlization Flowchart	Page	114
Full Calibration Procedure	Page	115
Calibration Procedual Notes.....	Page	118
Calibration Errors	Page	119
Digital Linearlization.....	Page	120
Digital Linearlization Errors.....	Page	123
Gravity Compensation Function.....	Page	124
Using the Gravity Compensation Function.....	Page	126
Gravity Compensation Function Errors	Page	128
Gravity Values at Various Locations.....	Page	129
Acceleration due to Gravity.....	Page	129
World Latitude Map.....	Page	130

F-Functions

The F-Functions.....	Page	132
F-Function Setting Flowchart.....	Page	133
Changing the F-Functions.....	Page	134
F-Function Errors.....	Page	135
F-Functions And Their Settings.....	Page	136

I/O Interfaces & Operations

Standard Serial Output.....	Page	147
Parallel BCD Output Option OP-01.....	Page	149
External I/O Interface Option OP-02.....	Page	151
RS-232C Interface Option OP-04.....	Page	152
Analog Output Option OP-07	Page	170
Built-In Printer option OP-08	Page	172
Changing the Printer Paper.....	Page	173
The Digital Clock Option OP-09	Page	174
To Set the Clock	Page	174
Connection To An External Printer	Page	177
Panel Mounting Kit Option OP-10.....	Page	181

Wall Mounting Kit Option OP-11.....	Page	182
Dimensions	Page	183

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/AnD/AD-4322A Mark II instruction manual.html](https://the-checkout-tech.com/manuals/AnD/AD-4322A%20Mark%20II%20instruction%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)