

# AD-4323

WEIGHING INDICATOR

## INSTRUCTION MANUAL

---

Owners-AD-4323-v.3.d 91.10.09 TES

WEIGHING INDICATOR

○ Check Weighing Mode • F-70 = "1"

Control I/O External Interface • Check Mode (F-70 = "1") .....	Page 64
Setpoint • Check Comparison Mode 1 (F-70 = "1", F-15 = "1") ..	Page 65
Setpoint • Check Comparison Mode 2 (F-70 = "1", F-15 = "2") ..	Page 68
Setpoint • Check Comparison Mode 3 (F-70 = "1", F-15 = "3") ..	Page 71
Setpoint • Check Comparison Mode 4 (F-70 = "1", F-15 = "4") ..	Page 74
Setpoint • Check Comparison Mode 5 (F-70 = "1", F-15 = "5") ..	Page 77
Set Weight Value View Mode .....	Page 78
Standard Serial Output .....	Page 80

## ***Options***

Parallel BCD Output (Option OP-01) .....	Page 82
RS-232C Interface (Option OP-04) .....	Page 84
Setpoint Unit (Option OP-05) .....	Page 88
Analog Output (Option OP-07) .....	Page 92
Dimensions .....	Page 94

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/AnD/AD-4323 instruction manual.html](https://the-checkout-tech.com/manuals/AnD/AD-4323%20instruction%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)