

AD-4323

WEIGHING INDICATOR

INSTRUCTION MANUAL

Owners-AD-4323-v.3.d 91.10.09 TES

WEIGHING INDICATOR

○ Check Weighing Mode • F-70 = "1"

Control I/O External Interface • Check Mode (F-70 = "1")	Page 64
Setpoint • Check Comparison Mode 1 (F-70 = "1", F-15 = "1") ..	Page 65
Setpoint • Check Comparison Mode 2 (F-70 = "1", F-15 = "2") ..	Page 68
Setpoint • Check Comparison Mode 3 (F-70 = "1", F-15 = "3") ..	Page 71
Setpoint • Check Comparison Mode 4 (F-70 = "1", F-15 = "4") ..	Page 74
Setpoint • Check Comparison Mode 5 (F-70 = "1", F-15 = "5") ..	Page 77
Set Weight Value View Mode	Page 78
Standard Serial Output	Page 80

Options

Parallel BCD Output (Option OP-01)	Page 82
RS-232C Interface (Option OP-04)	Page 84
Setpoint Unit (Option OP-05)	Page 88
Analog Output (Option OP-07)	Page 92
Dimensions	Page 94

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*