



## INSTRUCTION MANUAL



# **CONTENTS**

---

<b>1. INTRODUCTION.....</b>	<b>4</b>
<b>2. INSTALLATION &amp; POWER SUPPLY .....</b>	<b>4</b>
2-1 INSTALLATION .....	4
2-2 POWER SUPPLY .....	4
2-3 CONNECTION TO LOAD CELL .....	5
<b>3. OPERATING CONTROLS.....</b>	<b>6</b>
3-1 FRONT PANEL .....	6
3-2 REAR PANEL .....	7
<b>4. CALIBRATION.....</b>	<b>8</b>
4-1 ENTERING CALIBRATION MODE .....	8
4-2 SETTING MINIMUM DIVISION .....	8
4-3 SETTING MAXIMUM CAPACITY .....	9
4-4 ZERO CALIBRATION .....	9
4-5 SPAN CALIBRATION .....	9
4-6 ESCAPING THE CALIBRATION MODE .....	10
4-7 CALIBRATION ERRORS .....	10
4-8 LOAD CELL OUTPUT & INPUT SENSITIVITY .....	12
<b>5. FUNCTIONS .....</b>	<b>13</b>
5-1 F-FUNCTIONS .....	14
5-2 CF-FUNCTIONS .....	17
<b>6. TARE .....</b>	<b>19</b>
6-1 [TARE $\wedge$ ] KEY TARING .....	19
6-2 [PREST TARE] KEY TARING .....	19
<b>7. ACCUMULATION .....</b>	<b>20</b>
7-1 ACCUMULATION .....	20
7-2 DISPLAYING ACCUMULATION DATA .....	20
7-3 UNDOING ACCUMULATION .....	21
7-4 CLEARING THE ACCUMULATION DATA .....	21
7-5 OUTPUTTING THE ACCUMULATION DATA .....	21

<b>8. COMPARATOR.....</b>	<b>22</b>
8-1 UPPER/LOWER LIMIT COMPARISON .....	22
8-2 SETPOINT CONTROL .....	24
<b>9. EXTERNAL INPUT .....</b>	<b>25</b>
<b>10. STANDARD SERIAL OUTPUT .....</b>	<b>25</b>
10-1 STREAM MODE (F9=0) .....	25
10-2 AUTO PRINT MODE (F9=1) .....	25
10-3 MANUAL PRINT MODE (F9=2) .....	25
10-4 DATA FORMAT .....	26
<b>11. OPTION INSTALLATION.....</b>	<b>27</b>
<b>12. OP-01 (BCD OUTPUT).....</b>	<b>28</b>
12-1 PIN CONNECTION.....	28
12-2 PRINT COMMAND-TIMING .....	29
12-3 OUTPUT CIRCUIT .....	29
12-4 RELATED FUNCTIONS .....	29
<b>13. OP-02 (COMPARATOR OUTPUT) .....</b>	<b>30</b>
<b>14. OP-03 (RS-422/ RS-485) OP-04 (RS-232C/ CURRENT LOOP).....</b>	<b>31</b>
14-1 RS-422/ RS-485 SELECTION .....	31
14-2 RELATED FUNCTIONS .....	31
14-3 INTERFACE SPECIFICATIONS .....	32
14-4 STREAM MODE (F19=0) .....	32
14-5 AUTO PRINT MODE (F19=1) .....	32
14-6 MANUAL PRINT MODE (F19=2) .....	33
14-7 COMMAND MODE (F19=3 OR 4) .....	33
14-8 DATA FORMAT .....	35
<b>15. SPECIFICATIONS .....</b>	<b>40</b>

<b>APPENDIX A. GRAVITY COMPENSATION .....</b>	<b>41</b>
ABOUT GRAVITY COMPENSATION .....	41
SETTINGS .....	42
VALUE OF GRAVITY AT VARIOUS LOCATIONS .....	43
WORLD MAP .....	44
<b>APPENDIX B. APPROVAL .....</b>	<b>45</b>
<b>APPENDIX C. PANEL MOUNTING .....</b>	<b>46</b>
<b>APPENDIX D. DIMENSIONS .....</b>	<b>47</b>

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : the biggest supplier of cash register and scale manuals on the net