

**AD-4329  
OP-02**

**INSTRUCTION MANUAL**

---

**Weighing Indicator**





# Contents

1.	Compliance.....	3
1.1.1.	Compliance with FCC Rules .....	3
1.1.2.	Compliance with European Directive.....	3
2.	Introduction.....	4
3.	Installation and Precautions .....	5
3.1.1.	Installation and Precautions.....	5
3.1.2.	The Load Cell Connections .....	5
3.1.3.	Adjustment of the Load Cell Output .....	6
3.1.4.	Verifying Load Cell Output and Input Sensitivity.....	6
3.1.5.	Installing the Option Board.....	7
4.	Description of Panels and symbols .....	8
4.1.1.	Front Panel Description .....	8
4.1.2.	Rear Panel Description.....	9
4.1.3.	Other Displays and Symbols .....	9
4.1.4.	Accessories and Option OP-02 .....	10
5.	Calibration.....	11
5.1.1.	Items of Calibration Mode .....	11
5.2.	Calibration Procedure.....	12
5.2.1.	The Whole Procedure.....	12
5.2.2.	Preparation .....	13
5.2.3.	Entering the Calibration Mode .....	13
5.2.4.	Minimum Division (Weighing Interval).....	14
5.2.5.	Maximum Capacity .....	14
5.2.6.	Zero Calibration.....	15
5.2.7.	Span Calibration .....	16
5.2.8.	Exiting the Calibration Mode .....	17
5.3.	Weighing Range Function .....	18
5.3.1.	Setting Division and Range .....	19
5.4.	Digital Linearization Function .....	22
5.5.	Gravity Compensation Function .....	23
5.5.1.	The Gravity Acceleration Table .....	24
5.6.	Calibration Error Code List.....	25
6.	Functions.....	26
6.1.	Changing the Data of Functions.....	26
6.2.	F-Functions .....	27
6.3.	CF-Functions .....	32

<b>7.</b>	<b>Tare.....</b>	<b>33</b>
7.1.1.	Weighing Tare .....	33
7.1.2.	Digital Input .....	33
7.1.3.	Clearing Tare.....	33
<b>8.</b>	<b>Accumulation.....</b>	<b>34</b>
8.1.1.	Preparation and Specification .....	34
8.1.2.	Display and Operation .....	35
<b>9.</b>	<b>Comparison .....</b>	<b>36</b>
9.1.	Comparator Output Relay (OP-02) .....	36
9.2.	Upper/Lower Limit Comparison.....	36
9.2.1.	Selecting Upper/Lower Limit Comparison.....	37
9.2.2.	Condition formula for Comparison.....	37
9.2.3.	Setting Upper/Lower Limit Values.....	38
9.2.4.	Example .....	38
9.3.	Setpoint Comparison.....	39
9.3.1.	Selecting Setpoint Comparison .....	39
9.3.2.	Description of Input parameters and Outputs.....	39
9.3.3.	Setting the Parameters of Setpoint Comparison.....	40
<b>10.</b>	<b>External Control Input.....</b>	<b>41</b>
<b>11.</b>	<b>Standard Serial Data Output (SER.OUT) .....</b>	<b>42</b>
11.1.1.	Related Functions .....	42
11.1.2.	Data Format.....	43
<b>12.</b>	<b>RS-232C Interface.....</b>	<b>44</b>
12.1.1.	Data Format.....	45
12.1.2.	Command Format.....	46
12.1.3.	Command to Request Data.....	46
12.1.4.	Commands to Control the Indicator.....	47
12.1.5.	Commands to Set Parameters.....	47
12.1.6.	Related Functions .....	49
<b>13.</b>	<b>Specifications.....</b>	<b>50</b>
13.1.	Dimensions .....	51

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/AnD/AD-4329 instruction manual.html](https://the-checkout-tech.com/manuals/AnD/AD-4329%20instruction%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)