

AD-4402

INSTRUCTION MANUAL

Multi Function Weighing Indicator

AND

A&D Company, Limited



Contents

1.	Compliance.....	4
1.1.1.	Compliance with FCC rules.....	4
1.1.2.	Compliance with European Directive.....	4
2.	Outline and Features	5
2.1.	Precaution	6
2.2.	Front Panel.....	7
2.2.1.	Keys	7
2.2.2.	Symbols	8
2.3.	Rear Panel.....	10
3.	Installation.....	11
3.1.	Mounting Indicator	11
3.2.	Connecting Loadcell Cable.....	12
3.2.1.	Verifying Loadcell Output and Input Sensitivity	13
3.3.	Wiring Power Cord	14
3.4.	Installing Options.....	15
4.	Basic Operation	16
4.1.	Key Operation Examples	16
4.1.1.	Standby Mode	16
4.1.2.	Cursor Operation.....	16
4.1.3.	Inputting Characters	16
4.1.4.	The Way of Calling a Code	17
4.1.5.	The Way of Entering a Correction Mode	17
4.1.6.	The Way of Entering Menu.....	18
4.2.	Status Chart (Mode map)	19
5.	Calibration.....	20
5.1.	Actual Load Calibration (using Mass)	21
5.2.	Digital Span (Calibration without Mass).....	22
5.3.	Gravity Acceleration Correction	23
5.3.1.	Gravity Acceleration Reference.....	23
5.4.	Calibration Error	24
6.	Applications	25
6.1.	Hopper Scale with Material Code	25
6.1.1.	Definition of Material Code	25
6.1.2.	Recalling Material Code	25
6.1.3.	Editing Principle Parameters of Material Code	26
6.1.4.	Referring next Material Code.....	26
6.1.5.	Editing Full Parameters of Material Code.....	27
6.2.	Simple Hopper Scale with Recipe Code	30
6.2.1.	Definition of Recipe Code (Formal Function).....	30
6.2.2.	Using a Recipe Code	31
6.2.3.	Construction of Recipe Code.....	31
6.2.4.	Recalling a Recipe Code.....	31
6.2.5.	Arranging Material Code in Recipe Code	32
6.2.6.	Editing Full Parameters of Recipe Code	32

6.3.	System Design of Hopper Scale	34
6.3.1.	Operation and I/O Design	34
6.3.2.	Design Example	34
7.	Weighing Mode	35
7.1.1.	Contents of Batch Weighing Mode	35
7.2.	Batch Weighing Mode	36
7.2.1.	Selection of Batch Weighing	37
7.3.	Sequential Weighing Mode	38
7.3.1.	Normal Batching of Sequential Weighing	38
7.3.2.	Loss-in Weight of Sequential Mode	41
7.3.3.	Compensation Sequence	43
7.3.4.	Entrance Sequence	45
7.3.5.	Discharge Sequence	47
7.3.6.	Plain Recipe Sequence	49
7.3.7.	Automatic Selection of Supplying Mat	51
7.3.8.	Nozzle Control Sequence (vacuum cleaner)	52
7.3.9.	Mixture Sequence	53
7.3.10.	Safety Check Function	55
7.3.11.	Pause and Emergency Stop	55
7.3.12.	Restart Sequences from Pause	56
7.3.13.	Automatic Free Fall Compensation	57
7.3.14.	Real Time Free Fall Compensation	58
7.4.	Customer Programmed Control (Comparison Output)	59
7.4.1.	Normal Batching of Comparison Function	60
7.4.2.	Loss-in Weight of Comparison Function	62
7.5.	Other Functions	64
7.5.1.	Re-Zero Operation	64
7.5.2.	Zero Tracking Function	64
7.5.3.	Tare	65
7.5.4.	Preset Tare (Fixed Tare Function)	65
7.5.5.	Customizing Function Key (Key Design)	65
7.5.6.	Customizing Sub Display	66
7.5.7.	Graphic Display	67
7.5.8.	Accumulation Operation	68
7.5.9.	Undoing Accumulation Operation	68
7.5.10.	Clearing (Deleting) Accumulation Data	68
7.5.11.	Error Message and Alarm	69
7.5.12.	Graphic Status Indicator	71
7.5.13.	Memory Backup	71
8.	Interface	72
8.1.	Control I/O Function	72
8.1.1.	Interface circuit	72
8.1.2.	Timing Chart	73
8.2.	Built-in RS-485 Interface	74
8.2.1.	Connection	74
8.2.2.	Settings of Parameters	75
8.2.3.	Timing Chart	76
8.2.4.	General Data Format	77
8.2.5.	A&D Data Format	78
8.2.6.	Address	78
8.2.7.	Command List	79

8.3.	Built-in Current Loop Output	82
8.3.1.	Connection	82
8.3.2.	Communication Modes.....	82
8.3.3.	Data Format	83
8.4.	BCD Output of Option, OP-01	83
8.5.	Relay Output of Option, OP-02.....	87
8.6.	RS-422/485 Interface of Option, OP-03.....	88
8.7.	RS-232C Interface of Option, OP-04	91
8.8.	Parallel I/O of Option, OP-05.....	92
8.9.	Analog Output of Option, OP-07.....	93
9.	Maintenance	94
9.1.1.	Basic Operation.....	94
9.2.	Monitor Mode.....	94
9.2.1.	Monitoring Control I/O Function.....	94
9.2.2.	Monitoring Built-in RS-485 Interface.....	94
9.2.3.	Monitoring Built-in Current Loop Output	95
9.2.4.	Monitoring A/D Converter.....	95
9.2.5.	Monitoring BCD Output of OP-01	95
9.2.6.	Monitoring Relay Output of OP-02	95
9.2.7.	Monitoring RS-422/485 Interface of OP-03	96
9.2.8.	Monitoring RS-232C Interface of OP-04.....	96
9.2.9.	Monitoring Parallel I/O of OP-05.....	96
9.2.10.	Monitoring Analog Output of OP-07	96
9.3.	Test Mode.....	97
9.3.1.	Testing Control I/O Function	97
9.3.2.	Testing Built-in RS-485 Interface.....	97
9.3.3.	Testing Built-in Current Loop Output.....	97
9.3.4.	Testing A/D Converter	98
9.3.5.	Testing BCD Output of OP-01	98
9.3.6.	Testing Relay Output of OP-02	98
9.3.7.	Testing RS-422/485 Interface of OP-03	98
9.3.8.	Testing RS-232C Interface of OP-04.....	99
9.3.9.	Testing Parallel I/O of OP-05.....	99
9.3.10.	Testing Analog Output of OP-07	99
9.4.	Initializing Parameters	100
9.5.	Remote Operation	102
10.	Function List	103
10.1.1.	Operation Keys.....	103
10.1.2.	Outline of the Function List.....	104
10.2.	Referring Parameters	105
10.3.	Parameter Settings.....	105
10.4.	Parameter List	106
11.	Specifications.....	132
11.1.	Dimensions.....	135
11.2.	Accessories	135
12.	References	136
12.1.	Abbreviation.....	136
12.2.	ASCII Code for AD-4402	137
12.3.	Index.....	138

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/AnD/AD-4402 instruction manual.html](https://the-checkout-tech.com/manuals/AnD/AD-4402%20instruction%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)