



OP-03/05/07

INSTRUCTION MANUAL

Weighing Indicator



A&D Company, Limited

WM:PD4000504-01 b



Contents

1.	<i>Compliance</i>	4
1.1.1.	Compliance with FCC Rules	4
1.1.2.	Compliance with European Directive.....	4
2.	<i>Introduction</i>	5
3.	<i>Installation and Precautions</i>	6
3.1.1.	Installation and Precautions.....	6
3.1.2.	The Load Cell Connections.....	6
3.1.3.	Adjustment of the Load Cell Output	7
3.1.4.	Verifying Load Cell Output and Input Sensitivity	7
4.	<i>Description of Panels and symbols</i>	8
4.1.1.	Front Panel Description	8
4.1.2.	Rear Panel Description.....	9
4.1.3.	Other Displays and Symbols.....	9
4.1.4.	Accessories.....	9
5.	<i>Calibration</i>	10
5.1.1.	Items of Calibration Mode.....	10
5.2.	Calibration Procedure	11
5.2.1.	Setting a weighing unit	11
5.2.2.	Setting of range and unit	12
5.2.3.	Setting resolution, decimal point and display format	12
5.2.4.	Setting of Capacity of First Range.....	13
5.2.5.	Setting of resolution of second range.....	13
5.2.6.	Setting capacity of the second range	13
5.2.7.	Preparation	13
5.2.8.	Zero Calibration.....	14
5.2.9.	Span Calibration.....	14
5.2.10.	Exiting the Calibration Mode	15
5.3.	Weighing Range Function	16
5.3.1.	Setting Division and Range	17
5.4.	Digital Linearization Function	17
5.5.	Gravity Compensation Function	18
5.5.1.	The Gravity Acceleration Table	19
5.6	Calibration Error Code List	20

6. Functions	21
6.1. Changing the Function Settings	21
6.2. F-Functions	22
6.3. CF-Functions	30
7. Tare	31
7.1.1. Weighing Tare.....	31
7.1.2. Digital Input.....	31
7.1.3. Clearing Tare	31
8. Accumulation	32
8.1.1. Preparation and Specification.....	32
8.1.2. Display and Operation	33
9. Memory Code	35
9.1.1. Using Memory Code	35
10. Comparison	36
10.1. Weight Check Mode	36
10.1.1. Condition formula for Comparison.....	37
10.1.2. Setting Upper/Lower Limit Values	37
10.1.3. Setting Order and Display for Weight Check Mode.....	38
10.2. Setpoint Comparison.....	39
10.2.1. Description of Input parameters and Outputs (F22 = 11).....	39
10.2.2. Setting the Parameters of Setpoint Comparison.....	39
10.2.3. Setting Order and Display for Setpoint Comparison and Simple batch.....	40
11. Counting Function	41
11.1. Using Counting Function	41
11.2. Unit Weight Registration	41
12. RS-232C Interface	43
12.1. Specification	43
12.2. Data Output Mode	44
12.3. Data Format	45
12.4. Command Format.....	45
12.4.1. Command to Request Data	46
12.4.2. Commands to Control the Indicator.....	47
12.4.3. Commands to Set Parameters	48
12.4.4. Commands to Set Data Output/ Print Format (UFC)	49

12.5. UFC Command Parameter	50
<i>13. Calendar / Clock (AD-4405 only)</i>	<i>51</i>
13.1. Time and Date Functions	51
13.2. Setting Time and Date	52
<i>14. Specifications</i>	<i>54</i>
14.1. Dimensions	55

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*