

**AD-4406**

**OP-03/04/05/07/08/11**

**WEIGHING INDICATOR**

**INSTRUCTION MANUAL**





# Contents

<b>1. Compliance</b>	<b>3</b>
1.1. Compliance with FCC Rules	3
1.2. Compliance with European Directive	3
<b>2. Introduction</b>	<b>4</b>
<b>3. Installation and Precautions</b>	<b>5</b>
3.1. Installation and Precautions	5
3.2. Power Supply	5
3.3. The Load Cell Connections	6
3.4. Adjustment of the Load Cell Output	6
3.5. Verifying Load Cell Output and Input Sensitivity	7
3.6. Installing an Option Board	7
3.7. Attaching the Display Stand (OP-11)	7
<b>4. Description of Panels and Symbols</b>	<b>8</b>
4.1. Front Panel Description	8
4.2. Rear Panel Description	9
4.3. Other Displays and Symbols	9
4.4. Accessories	9
<b>5. Calibration</b>	<b>10</b>
5.1. Items of the Calibration Mode	10
5.2. Calibration Procedure	11
5.2.1. Configuring a Weighing Instrument	11
5.2.2. Specifying the Range and Unit	12
5.2.3. Specifying the Resolution, Decimal Point Position and Format	12
5.2.4. Specifying the Weighing Capacity of the First Range	13
5.2.5. Specifying the Second Range Resolution	13
5.2.6. Specifying the Second Range Capacity	13
5.2.7. To Get Stabilized Data	13
5.2.8. Zero Calibration	14
5.2.9. Span Calibration	14
5.2.10. Exiting the Calibration Mode	15
5.3. Weighing Range Function	16
5.3.1. Setting the Division and Range	17
5.4. Digital Linearization Function	17
5.5. Gravity Compensation Function	18
5.5.1. The Gravity Acceleration Table	19
5.6. Calibration Error Code List	20
<b>6. Functions</b>	<b>21</b>

6.1.	Changing the Function Settings.....	21
6.2.	F-Functions .....	22
6.3.	CF-Functions .....	29
<b>7.</b>	<b>Function keys F1 and F2 .....</b>	<b>30</b>
<b>8.</b>	<b>Tare .....</b>	<b>31</b>
<b>9.</b>	<b>Accumulation .....</b>	<b>32</b>
9.1.	Preparation and Specification .....	32
9.2.	Display and Operation .....	33
<b>10.</b>	<b>Code Memory .....</b>	<b>35</b>
<b>11.</b>	<b>Comparison .....</b>	<b>36</b>
11.1.	Weight Check Mode .....	36
11.1.1.	Condition Formula for Comparison .....	37
11.1.2.	Setting the Upper/Lower Limit Values .....	37
11.2.	Setpoint Comparison .....	39
11.2.1.	Description of Input Parameters and Outputs .....	39
11.2.2.	Simple Batch .....	40
11.2.3.	Setting the Parameters of Setpoint Comparison .....	41
<b>12.</b>	<b>Hold Function.....</b>	<b>42</b>
12.1.	Setting the Hold Functions.....	42
<b>13.</b>	<b>RS-232C Interface (OP-04, OP-05, OP-08).....</b>	<b>44</b>
13.1.	Specifications .....	44
13.2.	Data Format .....	45
13.3.	Command Format.....	45
13.3.1.	Commands to Request Data.....	46
13.3.2.	Commands to Control the Indicator .....	47
13.3.3.	Commands to Set Parameters.....	49
13.3.4.	Commands for Hold Function .....	49
13.3.5.	Commands to Set Serial Data Output Format (UFC) .....	50
13.4.	UFC Command .....	50
<b>14.</b>	<b>RS-422/RS-485, Relay Output (OP-03).....</b>	<b>52</b>
<b>15.</b>	<b>Relay Output &amp; Control Input (OP-05).....</b>	<b>54</b>
<b>16.</b>	<b>4-20 mA Analog Output (OP-07) .....</b>	<b>55</b>
<b>17.</b>	<b>Current Loop Output (OP-08).....</b>	<b>56</b>
<b>18.</b>	<b>Specifications .....</b>	<b>58</b>
18.1.	Dimensions.....	59

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/AnD/AD-4406 Indicator instruction manual.html](https://the-checkout-tech.com/manuals/AnD/AD-4406%20Indicator%20instruction%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)