



**AD-4407**

**INSTRUCTION MANUAL**

---

**Weighing Indicator**

**AND**

A&D Company, Limited



# Contents

1.	Compliance .....	3
1.1.1.	Compliance with FCC Rules .....	3
1.1.2.	Compliance with European Directives .....	3
2.	Introduction .....	4
3.	Installation and Precautions .....	5
3.1.1.	Installation and Precautions .....	5
3.1.2.	The Load Cell Connections .....	5
3.1.3.	Adjustment of the Load Cell Output .....	6
3.1.4.	Verifying Load Cell Output and Input Sensitivity .....	6
3.1.5.	Installing an Option board .....	7
4.	Description of Panels and symbols .....	8
4.1.1.	Front Panel Description .....	8
4.1.2.	Rear Panel Description .....	9
4.1.3.	Other Displays and Symbols .....	10
4.1.4.	Accessories and Options .....	10
5.	Calibration .....	11
5.1.1.	Items of Calibration Mode .....	11
5.2.	Calibration Procedure .....	12
5.2.1.	Configuring a Weighing Instrument .....	12
5.2.2.	To Get Stabilized Data .....	14
5.2.3.	Zero Calibration .....	15
5.2.4.	Span Calibration .....	15
5.2.5.	Exiting the Calibration Mode .....	16
5.3.	Weighing Range Function .....	17
5.3.1.	Selecting the Division and Range .....	18
5.4.	Digital Linearization Function .....	18
5.5.	Gravity Compensation Function .....	19
5.5.1.	The Gravity Acceleration Table .....	20
5.6.	Calibration Error Code List .....	21
6.	Functions .....	22
6.1.	Changing the Function Settings .....	22
6.2.	F-Functions .....	23
6.3.	CF-Functions .....	30
7.	Tare .....	31
8.	Accumulation .....	32
8.1.1.	Preparation and Specification .....	32
8.1.2.	Display and Operation .....	33
9.	Code Memory .....	34

9.1.1. Using Code Memory .....	35
10. Comparison.....	36
10.1. Weight Check Mode.....	36
10.1.1. Condition Formula for Comparison .....	37
10.1.2. Setting the Upper/Lower Limit Values.....	37
10.2. Setpoint Comparison .....	39
10.2.1. Description of Input parameters and Outputs .....	39
10.2.2. Simple Batch .....	40
10.2.3. Setting the Parameters of Setpoint Comparison.....	41
11. Hold Function.....	42
11.1.1. Setting the Hold Functions.....	42
12. Counting Function.....	44
12.1. Using the Counting Function.....	44
12.2. Unit Weight Registration .....	44
13. RS-232C Interface .....	46
13.1. Specification .....	46
13.2. Data Format.....	47
13.3. Command Format.....	47
13.3.1. Command to Request Data .....	48
13.3.2. Commands to Control the Indicator .....	49
13.3.3. Commands to Set Parameters .....	51
13.3.4. Commands for Hold Function .....	52
13.3.5. Commands to Set Serial Data Output Format (UFC).....	52
13.4. UFC Command.....	53
14. RS-422/RS-485, Relay Output(OP-03).....	55
15. Relay Output & Control Input (OP-05) .....	57
16. 4-20mA Analog Output (OP-07).....	58
17. Current Loop Output (OP-08).....	59
18. Specifications.....	61
18.1. Dimensions .....	62

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/AnD/AD-4407> Indicator instruction and calibration

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)