



# INSTRUCTION MANUAL

## EP-KB Series

PRECISION INDUSTRIAL BALANCES

MODELS: EP-12KB

EP-20KB

EP-40KB

EP-41KB

EP-60KB

imno-EP-B-a/b-v.1

**A&D** *Mercury*  
PTY.LTD.

**A&D MERCURY PTY. LTD.**

32 Dew St, Thebarton, S.A., 5031

Telephone (08) 352 3033

Facsimile (08) 3527409

# CONTENTS

Introduction .....	Page 3
Specifications .....	Page 4
Installation .....	Page 5
Power Requirements .....	Page 6
Changing the Fuse .....	Page 6
Best Conditions for Weighing .....	Page 6
Calibration .....	Page 7
Parameter Settings .....	Page 9
The Weighing Modes .....	Page 11
The Weighing Units .....	Page 12
Display and Key Functions .....	Page 14
Operation .....	Page 16
Weighing .....	Page 16
Weighing - In .....	Page 16
Weighing - Out .....	Page 16
Percentage Function .....	Page 17
Counting Functions .....	Page 17
Setting a Unit Weight into Memory .....	Page 18
Printing with AD-8117 .....	Page 19
Underhook Weighing .....	Page 19
Interface .....	Page 20
Specifications .....	Page 20
AD-8117 & Other Devices .....	Page 20
Transmission Modes .....	Page 21
Command Mode Timing (RS-232C) .....	Page 21
Data Format .....	Page 22
Circuit Diagram .....	Page 23
Computer Programs .....	Page 24
Appendix .....	Page 25
Calibration With Adjustments .....	Page 26

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/AnD/EP-KB series user manual.html>

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)