

# FC-*i* series FC-*Si* series

## INSTRUCTION MANUAL

---

### Counting Scale

FC-50 <i>Ki</i>	FC-5000 <i>Si</i>
FC-20 <i>Ki</i>	FC-500 <i>Si</i>
FC-10 <i>Ki</i>	
FC-5000 <i>i</i>	
FC-2000 <i>i</i>	
FC-1000 <i>i</i>	
FC-500 <i>i</i>	

# **AND**

A&D Company, Limited

---

# Contents

---

<b>1. INTRODUCTION .....</b>	<b>3</b>
1-1. Introduction.....	3
1-2. Unpacking .....	4
1-3. Setting Up Your Scale .....	5
1-4. Standby and Operating Mode.....	7
1-5. Simple Operation Mode.....	7
1-6. kg or lb Weighing Units .....	7
1-7. Last Unit Weight Used Feature .....	8
<b>2. FRONT PANEL OVERVIEW .....</b>	<b>9</b>
<b>3. BASIC OPERATIONS .....</b>	<b>10</b>
3-1. Basic Operations.....	10
3-2. To Start Counting.....	12
3-3. Unit Weight By Samples.....	13
3-4. Unit Weight By KEYBOARD.....	17
3-5. Unit Weight By ID Number .....	18
<b>4. ENTERING A TARE WEIGHT .....</b>	<b>19</b>
4-1. Using the KEYBOARD TARE Key.....	19
4-2. To Clear TARE.....	20
<b>5. STORE UNIT WEIGHT .....</b>	<b>21</b>
5-1. Store Unit Weight by ID Number .....	21
5-2. Clearing A Stored Unit Weight .....	22
5-3. Store Item Code by ID Number .....	23
5-4. Unit Weight, Tare, Comparator Limits & Total Count Stored .....	25
<b>6. USING THE M+ MEMORY .....</b>	<b>26</b>
6-1. The M+ Memory Function .....	26
6-2. Viewing the M+ Total .....	27
6-3. Clearing the M+ Total .....	27
6-4. The M- Function .....	27
<b>7. COMPARATOR FUNCTION.....</b>	<b>28</b>
<b>8. TIME AND DATE FUNCTION.....</b>	<b>30</b>
<b>9. CALIBRATION .....</b>	<b>31</b>

9-1.	Calibration Procedure Using a Weight .....	31
9-2.	Gravity Compensation.....	33
<b>10.</b>	<b>F-FUNCTION PARAMETERS.....</b>	<b>34</b>
10-1.	To Change or View F-Function Settings.....	34
10-2.	F-Functions .....	36
<b>11.</b>	<b>ACAI FUNCTION .....</b>	<b>44</b>
11-1.	ACAI Automatic Counting Accuracy Improvement .....	44
11-2.	ACAI Automatic Operation .....	44
11-3.	ACAI Manual Operation .....	45
<b>12.</b>	<b>RS-232C SERIAL INTERFACE .....</b>	<b>46</b>
12-1.	RS-232C Specifications .....	46
12-2.	Data Output Mode.....	47
12-3.	Connecting the AD-8121 Printer / MODE 1 or MODE 2.....	48
12-4.	Connecting the AD-8121 Printer / MODE 3.....	49
12-5.	Command Mode .....	50
12-6.	Using a Bar Code Reader.....	55
12-7.	Using UFC (Universal Flex Coms) Function .....	59
<b>13.</b>	<b>OPTIONS .....</b>	<b>62</b>
13-1.	OP-01 Bar Code Reader.....	62
13-2.	OP-02 Ni-MH Battery Pack .....	65
13-3.	OP-03 2 Ch. RS-232C .....	67
13-4.	OP-04 RS-232C and Comparator Relay Output.....	68
13-5.	OP-05 Remote Scale Interface .....	69
<b>14.</b>	<b>SPECIFICATIONS .....</b>	<b>73</b>
14-1.	Dimensions .....	75
<b>15.</b>	<b>GRAVITY ACCELERATION MAP.....</b>	<b>76</b>
<b>16.</b>	<b>INDEX .....</b>	<b>78</b>

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/AnD/FC-i Series and FC-Si Series instruction ma>

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)