

FS-*i* Series

INSTRUCTION MANUAL

Check Weighing Scales

FS-6*Ki*
FS-15*Ki*
FS-30*Ki*

AND
A&D Company, Limited

Contents

1. COMPLIANCE	2
2. INTRODUCTION	3
3. UNPACKING	3
4. CAUTION	4
4-1. Precautions for Installing the Scale	4
4-2. Precautions for Operating the Scale	4
4-3. Precautions for Storing the Scale	4
5. SETTING UP	5
5-1. Attaching a display pod to the display support column	5
5-2. Installing the scale	5
6. NAMES AND FUNCTIONS	6
7. BASIC OPERATION	10
7-1. Turning the power ON and OFF	10
7-2. Selecting a weighing unit	10
7-3. Basic operation	10
7-4. Weighing with Preset Tare	11
7-5. To Clear a Tare Weight	11
7-6. Weight display resolution	12
7-7. Simplified operation mode	12
7-8. LCD backlight	12
8. CHECK WEIGHING	13
8-1. Target weight setting mode	13
8-2. Upper & Lower limits weight setting mode	16
8-3. The comparator memory	17
9. ANALOG SWEEP DISPLAY	19
9-1. Selecting a display mode	19
9-2. Example of the analog sweep display	20
10. CALIBRATION	22
10-1. Calibration using a weight	22
10-2. Gravity acceleration correction	23
11. FUNCTIONS	24
11-1. The procedure for setting parameters	24
11-2. Function list	25
12. SPECIFICATIONS	27
12-1. Specifications	27
12-2. Dimensions	28
13. GRAVITY ACCELERATION MAP	29

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*