



INSTRUCTION MANUAL



CONTENTS

Basic Operation

| | |
|---|-----------|
| 1. INTRODUCTION | 3 |
| 1-1 About This Manual | 3 |
| 1-2 Features | 3 |
| 1-3 Compliance | 3 |
| 2. UNPACKING THE BALANCE | 4 |
| 2-1 Unpacking | 4 |
| 2-2 Installing the Balance | 5 |
| 3. PRECAUTIONS | 6 |
| 3-1 Before Use | 6 |
| 3-2 During Use | 6 |
| 3-3 After Use | 7 |
| 3-4 Power Supply | 7 |
| 3-5 Display Symbols and Key Operation | 8 |
| 4. WEIGHING UNITS | 9 |
| 4-1 Units | 9 |
| 4-2 Storing Units | 11 |
| 5. WEIGHING | 12 |
| 5-1 Basic Operation (Gram Mode) | 12 |
| 5-2 Counting Mode (PCS) | 13 |
| 5-3 Percent Mode (%) | 15 |
| 5-4 Statistical Calculation Mode | 16 |
| 5-5 Statistical Calculation Mode (Example of Use) | 20 |

Adapting to the Environment

| | |
|---|-----------|
| 6. RESPONSE ADJUSTMENT | 22 |
| 7. CALIBRATION | 23 |
| 7-1 Calibration Mode | 23 |
| 7-2 Calibration Using the Internal mass (One-Touch Calibration, only for FZ- <i>i</i> series) | 24 |
| 7-3 Correcting the Internal Mass Value (Only for FZ- <i>i</i> series) | 25 |
| 7-4 Calibration Using an External Weight | 26 |
| 7-5 Calibration Test Using an External Weight | 28 |
| 8. FUNCTION SWITCH AND INITIALIZATION | 30 |
| 8-1 Permit or Inhibit | 30 |
| 8-2 Initializing the Balance | 31 |

Functions

| | |
|--|-----------|
| 9. FUNCTION TABLE | 32 |
| 9-1 Structure and Sequence of the Function Table | 32 |

| | |
|---|-----------|
| 9-2 Display and Keys | 32 |
| 9-3 Details of the Function Table | 33 |
| 9-4 Description of the Class "Environment, Display" | 36 |
| 9-5 Description of the Item "Data Output Mode" | 38 |
| 9-6 Description of the Item "Data Format" | 39 |
| 9-7 Data Format Examples | 41 |
| 9-8 Description of the Item "Application Function" | 42 |
| 9-9 Clock and Calendar Function | 43 |
| 9-10 Comparator Function | 45 |
| 10. ID NUMBER AND GLP REPORT | 46 |
| 10-1 Setting the ID Number | 46 |
| 10-2 GLP Report | 46 |
| 11. UNDERHOOK | 49 |
| 12. PROGRAMMABLE-UNIT | 50 |
| RS-232C Serial Interface | |
| 13. RS-232C SERIAL INTERFACE | 51 |
| 14. CONNECTION TO PERIPHERAL EQUIPMENT | 52 |
| 14-1 Connection to the AD-8121B Printer | 52 |
| 14-2 Connection to a Computer | 53 |
| 14-3 Using Windows Communication Tools (WinCT) | 53 |
| 15. COMMANDS | 55 |
| 15-1 Command List | 55 |
| 15-2 Acknowledge Code and Error Codes | 56 |
| 15-3 Settings Related to RS-232C | 57 |
| Maintenance | |
| 16. MAINTENANCE | 58 |
| 17. TROUBLESHOOTING | 59 |
| 17-1 Checking the Balance Performance and Environment | 59 |
| 17-2 Error Codes | 60 |
| 17-3 Asking For Repair | 61 |
| 18. OPTIONS | 62 |
| 19. SPECIFICATIONS | 64 |
| 20. EXTERNAL DIMENSIONS | 66 |
| 21. TERMS/INDEX | 67 |

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/AnD/FX-120i FX-200i FX-300i FX-1200i FX-2000i>

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)