

GF SERIES

GF-200/GF-300/GF-400/GF-600/GF-800/GF-1000
GF-1200/GF-2000/GF-3000/GF-4000/GF-6100
GF-6000/GF-8000

Precision Balance

INSTRUCTION MANUAL



1WMPD4000209C

CONTENTS

Basic Operation

1. INTRODUCTION	3
1-1 About This Manual	3
1-2 Features	3
1-3 Compliance	4
2. UNPACKING THE BALANCE	6
2-1 Unpacking	6
2-2 Installing the Balance	7
3. PRECAUTIONS	8
3-1 Before Use	8
3-2 During Use	9
3-3 After Use	10
3-4 Power Supply	10
4. DISPLAY SYMBOLS AND KEY OPERATION	11
5. WEIGHING UNITS	12
5-1 Units	12
5-2 Storing Units	15

Adapting to the Environment

6. WEIGHING	17
6-1 Basic Operation (Gram Mode)	17
6-2 Counting Mode (PC)	18
6-3 Percent Mode (Pct)	20
7. RESPONSE ADJUSTMENT / SELF CHECK FUNCTION	21
7-1 Manual Response Adjustment	21
7-2 Self Check Function	22
8. CALIBRATION	23
8-1 Calibration Modes	23
8-2 Calibration Using an External Weight	24
8-3 Calibration Test Using an External Weight	26

Functions

9. FUNCTION SWITCH AND INITIALIZATION	28
9-1 Permit or Inhibit	28
9-2 Initializing the Balance	29
10. FUNCTION TABLE	30
10-1 Structure and Sequence of the Function Table	30
10-2 Display and Keys	30
10-3 Details of the Function Table	31
10-4 Description of the Class "Environment, Display"	34

10-5 Description of the Item "Data output mode"	36
10-6 Description of the Item "Data format"	37
10-7 Description of the Data Format Added to the Weighing Data	39
10-8 Data Format Examples	40
10-9 Comparator Function	42
11. ID NUMBER AND GLP REPORT.....	44
11-1 Setting the ID Number	44
11-2 GLP Report	44
12. DATA MEMORY	47
12-1 Notes on Using Data Memory	47
12-2 Memory for Weighing Data.....	48
12-3 Memory for Unit Mass in the Counting Mode	51
13. UNDERHOOK.....	52
14. PROGRAMMABLE-UNIT	53
15. DENSITY MEASUREMENT.....	54
RS-232C Serial Interface	
16. RS-232C SERIAL INTERFACE / EXTERNAL INPUT	57
17. CONNECTION TO PERIPHERAL EQUIPMENT	59
17-1 Connection to the AD-8121B Printer	59
17-2 Connection to a Computer.....	59
17-3 Using Windows Communication Tools (WinCT)	60
18. COMMANDS.....	62
18-1 Command List.....	62
18-2 Acknowledge Code and Error Codes	63
18-3 Command Examples	64
18-4 Control Using CTS and RTS	67
18-5 Settings Related to RS-232C	67
Maintenance	
19. MAINTENANCE.....	68
20. TROUBLESHOOTING	68
20-1 Checking the Balance Performance and Environment.....	68
20-2 Error Codes	69
20-3 Asking For Repair	71
21. SPECIFICATIONS.....	72
22. OPTIONS	74
23. EXTERNAL DIMENSIONS	77
24. TERMS/INDEX.....	78

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/AnD/GF-200 to GF-8000 instruction manual.html>

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)