

GX SERIES

GX-200/GX-400/GX-600
GX-2000/GX-4000/GX-6100
GX-6000/GX-8000

Multi-Function Balance

INSTRUCTION MANUAL



WM:PD4000087

CONTENTS

Basic Operation

1. INTRODUCTION	3
1-1 About This Manual.....	3
1-2 Features.....	3
1-3 Compliance.....	4
2. UNPACKING THE BALANCE	5
2-1 Unpacking.....	5
2-2 Installing the Balance.....	6
3. PRECAUTIONS	7
3-1 Before Use.....	7
3-2 During Use.....	7
3-3 After Use.....	8
3-4 Power Supply.....	8
3-5 Display Symbols and Key Operation.....	9
4. WEIGHING UNITS	10
4-1 Units.....	10
4-2 Storing Units.....	11
5. WEIGHING	11
5-1 Basic Operation (Gram Mode).....	11
5-2 Counting Mode (PC).....	12
5-3 Percent Mode (Pct).....	14

Adapting to the Environment

6. RESPONSE ADJUSTMENT / SELF CHECK FUNCTION	15
6-1 Automatic Response Adjustment / Self Check Function.....	15
6-2 Manual Response Adjustment.....	16
7. CALIBRATION	17
7-1 Calibration Group.....	17
7-2 Automatic Self Calibration (Calibration due to changes in temperature).....	18
7-3 Calibration Using the Internal mass (One-touch calibration).....	19
7-4 Calibration Using an External Weight.....	19
7-5 Calibration Test Using an External Weight.....	21
7-6 Correcting the Internal Mass Value.....	22

Functions

8. FUNCTION SWITCH AND INITIALIZATION	24
8-1 Permit or Inhibit.....	24
8-2 Initializing the Balance.....	25
9. FUNCTION TABLE	26
9-1 Structure and Sequence of the Function Table.....	26
9-2 Display and Keys.....	26

9-3 Details of the Function Table.....	27
9-4 Description of the Class "Environment, Display"	30
9-5 Description of the Item "Data output mode"	31
9-6 Description of the Item "Data format".....	33
9-7 Description of the Data Format Added to the Weighing Data	34
9-8 Data Format Examples	35
9-9 Clock and Calendar Function	37
9-10 Comparator Function	39
10. ID NUMBER AND GLP REPORT	41
10-1 Setting the ID Number	41
10-2 GLP Report	42
11. DATA MEMORY	45
11-1 Notes on Using Data Memory	45
11-2 Memory for Weighing Data	46
11-3 Memory for Calibration and Calibration Test Data	48
11-4 Memory for Unit Mass in the Counting Mode.....	49
12. UNDERHOOK.....	50
13. PROGRAMMABLE-UNIT	51
14. DENSITY MEASUREMENT	54
 RS-232C Serial Interface	
15. RS-232C SERIAL INTERFACE / EXTERNAL INPUT	55
16. CONNECTION TO PERIPHERAL EQUIPMENT	56
16-1 Connection to the AD-8121 Printer	56
16-2 Connection to a Computer.....	56
16-3 Using Windows Communication Tools (WinCT)	56
17. COMMANDS.....	58
17-1 Command List.....	58
17-2 Acknowledge Code and Error Codes.....	58
17-3 Control Using CTS and RTS.....	59
17-4 Settings Related to RS-232C.....	59
 Maintenance	
18. MAINTENANCE.....	60
19. TROUBLESHOOTING.....	60
19-1 Checking the Balance Performance and Environment.....	60
19-2 Error Codes.....	61
19-3 Asking for Repair.....	64
20. SPECIFICATIONS	65
21. OPTIONS	66
22. EXTERNAL DIMENSIONS	66
23. TERMS/INDEX.....	67

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/AnD/GX series user manual.html](https://the-checkout-tech.com/manuals/AnD/GX%20series%20user%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)