

HD Series

Counting Scales

Instruction Manual

V.1.A

HD-12K

HD-60KB

HD-03

HD-30K

HD-04

HD-60KA

HD-05

AND

A&D WEIGHING

...Clearly a Better Value

1555 McCandless Drive, Milpitas, CA 95035

Tel: (800) 726-3364 / (408) 263-5333 * Fax: (408) 263-0119

Fax-on-Demand: (800) 726-7099, Press 2 * Website: www.andweighing.com

Email: scales@andweighing.com

CONTENTS

ABOUT THIS MANUAL	iv
UNPACKING AND INSPECTIONS	v
1. INTRODUCTION	1
1-1. FEATURES	1
1-2. SPECIFICATIONS	3
1-3. PARTS DESCRIPTIONS	4
2. INSTALLATION	9
2-1. INSTALLATION CONDITIONS	9
2-2. INSTALLATION PROCEDURES	9
3. OPERATION	12
3-1. BASIC COUNTING OPERATION	12
3-2. ZERO ADJUSTMENT	13
3-3. TARE FUNCTION	13
3-4. STORING THE UNIT WEIGHT	14
3-5. ACAI (AUTOMATIC COUNTING ACCURACY IMPROVEMENT)	16
3-6. PIECE COUNTING	17
3-7. COMPARATOR	17
3-8. M+ MEMORY FUNCTION	19
3-9. OTHER FUNCTIONS	20
4. CALIBRATION	21
4-1. CALIBRATION PROCEDURE	22
4-2. GRAVITY COMPENSATION	23
5. FUNCTION SETTINGS	25
5-1. TABLE OF FUNCTIONS	25
5-2. FUNCTION SETTING	26
6. MAINTENANCE	32
6-1. CLEANING	32
6-2. CALIBRATION	32
6-3. PROBLEM SOLVING	32

7. OPTION : HD-03 (RS-232C SERIAL INTERFACE)34

7-1. FUNCTION SETTING34

7-2. INTERFACE35

7-3. COMMAND36

7-4. ERROR CODE TABLE38

8. OPTION : HD-04 (COMPARATOR / RELAY OUTPUT)39

8-1. FUNCTION SETTING39

8-2. INTERFACE40

9. OPTION : HD-05 (PRINTER INTERFACE / CURRENT LOOP)41

9-1. FUNCTION SETTING41

9-2. INTERFACE41

10. INSTALLATION OF OPTIONS42

APPENDIX A: DIMENSIONS43

APPENDIX B : GRAVITY ACCELETATION MAP44

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/AnD/HD-03 HD-04 HD-05 HD-12K HD-30K HD-6>

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)