

HV-G series HW-G series

INSTRUCTION MANUAL

Digital Platform Scale

HV-15KGL
HV-60KGL
HV-200KGL

HV-15KGV
HV-60KGV
HV-200KGV

HW-10KGL
HW-60KGL
HW-100KGL
HW-200KGL

HW-10KGV
HW-60KGV
HW-100KGV
HW-200KGV

HW-300KGL4
HW-600KGL4
HW-600KGL3
HW-1200KGL3

HW-300KGV4
HW-600KGV4
HW-600KGV3
HW-1200KGV3

AND

A&D Company, Limited



Contents

1.	Compliance	3
1.1.	Compliance with FCC rules.....	3
2.	Outline and Features	4
3.	Unpacking	5
3.1.	Accessories and Options List.....	7
4.	Precautions	9
4.1.	Installing the Scale	9
4.2.	Operating the Scale	9
4.3.	Storing the Scale	9
5.	Installing the Scale	10
5.1.	Setting up the Scale	10
5.1.1.	Procedure A	10
5.1.2.	Procedure B	11
5.1.3.	Procedure C	12
5.2.	Installing the Batteries for Type L	13
5.3.	Removing the Pole	14
5.3.1.	Procedure A	14
5.3.2.	Procedure B	15
5.4.	Grounding the scale	16
6.	Description of Each Part	17
6.1.	Display and Symbols	19
6.2.	Keys	21
7.	Basic Operation	23
7.1.	Turning the Scale on/off and Weighing	23
7.1.1.	Type V or Type L with AC Adapter	23
7.1.2.	Type L with Batteries	24
7.2.	Tare (And Net Display)	25
7.2.1.	Tare Input by Weighing	25
7.2.2.	Digital Input (Preset Tare)	25
7.3.	Weighing Range for the HV-G Series	26
7.4.	Mode Key (Changing Unit and Mode)	27
8.	Counting Mode	29
8.1.	Storing a Unit Mass	29
8.2.	Counting the Number of Articles	30
9.	Percentage Mode	31
9.1.	Storing a 100% Mass	31
9.2.	Reading the Percentage	32
10.	Accumulation Function	33
10.1.	Preparation (Setting Parameters)	34
10.2.	Operation and Performance (Examples)	35

11.	Upper/Lower Comparator Function.....	36
11.1.	Preparation (Setting Parameters)	37
11.2.	Operation and Performance (Examples).....	39
12.	Full/Dribble Batch Function.....	40
12.1.	Preparation (Setting Parameters)	42
13.	Simple Batch Function.....	44
13.1.	Preparation (Setting Parameters)	45
13.2.	Operation and Performance (Examples).....	46
14.	Calibration (Adjusting the Scale).....	47
14.1.	Gravity Acceleration Table.....	48
14.2.	Complete Calibration Procedure	49
14.2.1.	Gravity Acceleration Correction	49
14.2.2.	Preparation	49
14.2.3.	Calibration of the Zero Point	50
14.2.4.	Span Calibration	50
15.	Function Table	51
15.1.	Parameter Setting Procedure.....	51
15.2.	Parameter List.....	52
16.	RS-232C Serial Interface.....	56
16.1.	Data Format	57
16.2.	Stream Mode.....	59
16.2.1.	Preparation and Performance (Examples).....	59
16.3.	Command Mode	60
16.3.1.	Command List.....	60
16.3.2.	Example of Setting Parameters	63
17.	Options	64
17.1.	Extension Load Cell Cable (OP-02).....	64
17.2.	RS-232C/ Relay Output/ Buzzer (OP-03)	66
17.3.	RS-422/ RS-485 / Relay Output (OP-04)	68
17.3.1.	Communication Format.....	71
17.3.2.	Command List.....	71
17.4.	Built-in Printer for Type V (OP-06)	74
18.	Specifications	76
19.	Maintenance	81
19.1.	Check Points Before Calling Maintenance Service	81
19.1.1.	Repair	81

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*