

# HV-WP series HW-WP series

## INSTRUCTION MANUAL

### Waterproof Digital Platform Scale

HV-15KV-WP  
HV-60KV-WP  
HV-200KV-WP

HW-10KV-WP  
HW-60KV-WP  
HW-100KV-WP  
HW-200KV-WP



A&D Company, Limited



# Contents

1.	Compliance .....	3
1.1.1.	Compliance with FCC rules.....	3
1.1.2.	Classification of protection provided by enclosures .....	3
2.	Outline and Features.....	4
3.	Unpacking .....	5
3.1.	Accessories and Options list .....	6
4.	Caution.....	7
4.1.	Precautions for Installing the Scale .....	7
4.2.	Precautions for Operating the Scale.....	7
4.3.	Precautions for Storing the Scale .....	7
5.	Installing the Scale .....	8
5.1.	Removing the pole .....	9
5.2.	Grounding the scale .....	11
6.	Names .....	12
6.1.	Display and Symbols.....	13
6.2.	Switches.....	15
7.	Basic Operation.....	17
7.1.	Turing the Scale on/off and Weighing .....	17
7.2.	Tare (And Net Display).....	18
7.2.1.	The Way of Tare Input by Weighing.....	18
7.2.2.	The Way of Digital Input (Preset Tare).....	18
7.3.	Weighing Range for the HV-WP series .....	19
7.4.	Mode Switch (Changing Unit and Mode).....	20
8.	Counting Mode.....	22
8.1.	Storing a Unit Mass .....	22
8.2.	Counting the number of articles .....	23
9.	Percentage Mode .....	24
9.1.	Storing a 100% Mass .....	24
9.2.	Reading percentage .....	25
10.	Accumulation Function.....	26
10.1.	Preparation (Setting Parameters).....	27
10.2.	Operation and Performance (Examples).....	28
11.	Upper/Lower Comparator Function .....	29
11.1.	Preparation (Setting Parameters).....	30
11.2.	Operation and Performance (Examples).....	32
12.	Full/Dribble Batch Function .....	33

12.1.	Preparation (Setting Parameters).....	35
13.	Simple Batch Function .....	37
13.1.	Preparation (Setting Parameters).....	38
13.2.	Operation and Performance (Examples).....	39
14.	Calibration (Adjusting the Scale).....	40
14.1.1.	The Gravity Acceleration Table.....	41
14.2.	The Complete Calibration Procedure .....	42
14.2.1.	Gravity Acceleration Correction .....	42
14.2.2.	Preparation .....	42
14.2.3.	Calibration of the Zero Point .....	43
14.2.4.	Span Calibration .....	43
15.	The Function Table .....	44
15.1.	The Procedure for Setting Parameters.....	44
15.2.	Parameter List.....	45
16.	RS-232C Serial Interface .....	48
16.1.	Data Format .....	49
16.2.	Stream Mode.....	51
16.2.1.	Preparation and Performance (Examples).....	51
16.3.	Command mode.....	52
16.3.1.	Command List.....	52
16.3.2.	Example of Setting Parameters .....	55
17.	Options.....	56
17.1.	Extension cable (OP-02) .....	56
17.2.	RS-232C/ Relay output/ Buzzer (OP-03).....	57
17.2.1.	Installing OP-03 .....	58
17.3.	RS-422/ RS-485 / Relay output (OP-04) .....	59
17.3.1.	Installing OP-04 .....	60
17.3.2.	Communication Format.....	61
17.3.3.	Command List.....	62
17.4.	Roller Conveyor (OP-13, OP-14) .....	64
18.	Specification.....	65
19.	Maintenance.....	69
19.1.	Check Points Before Calling Maintenance Service .....	69
19.1.1.	Repair .....	69

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/AnD/HV-WP and HW-WP series instruction man>

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

<HTTPS://THE-CHECKOUT-TECH.COM>