

HW-G series

INSTRUCTION MANUAL

Digital Platform Scale

HW-10KGL

HW-10KGV

HW-60KGL

HW-60KGV

HW-100KGL

HW-100KGV

HW-200KGL

HW-200KGV





Contents

1	Compliance	3
1.1	Compliance with FCC rules	3
2	Outline and Features	4
3	Unpacking	5
3.1	Accessories and Options list	6
4	Caution	8
4.1	Precautions for Installing the Scale	8
4.2	Precautions for Operating the Scale	8
4.3	Precautions for Storing the Scale	8
5	Installing the Scale	9
5.1	Installing the batteries for Type L	11
6	Names	12
6.1	Display and Symbols	13
6.2	Switches	15
7	Basic Operation	17
7.1	Turning the Scale on/off and Weighing	17
7.1.1	Type V or Type L with AC adaptor	17
7.1.2	Type L with Batteries	18
7.2	Tare (and Net Display)	19
7.2.1	Semi-Automatic Tare (Input by Weighing)	19
7.2.2	Preset Tare (Digital Input of Known Tare)	19
7.3	Mode Switch (Changing Unit and Mode)	20
8	Counting Mode	21
8.1	Storing a Unit Mass	21
8.2	Counting the number of articles	22
9	Percentage Mode	23
9.1	Storing a 100% Mass	23
9.2	Reading Percentage	24
10	Accumulation Function	25
10.1	Preparation (Setting Parameters)	26
10.2	Operation and Performance (Examples)	27
11	Comparator Function	28
11.1	Preparation (Setting Parameters)	29
11.2	Operation and Performance (Examples)	31
12.	Full/Dribble Batch Function	32
12.1	Preparation (Setting Parameters)	34
13.	Simple Batch Function	36
13.1	Preparation (Setting Parameters)	37
13.2	Operation and Performance (Examples)	38

14	Calibration (Adjusting the Scale).....	39
14.1	The Gravity Acceleration Table	40
14.2	The Complete Calibration Procedure	41
14.2.1	Gravity Acceleration Correction	41
14.2.2	Preparation	41
14.2.3	Calibration of the Zero Point.....	42
14.2.4	Span Calibration	42
15	The Function Table	43
15.1	The Procedure for Setting Parameters	43
15.2	Parameter List	44
16	RS-232C Serial Interface	48
16.1	Data Format	49
16.2	Stream Mode	51
16.2.1	Preparation and Performance (Examples)	51
16.3	Command mode	52
16.3.1	Command List	52
16.4	Preparation (Setting Parameters)	55
17	Options	56
17.1	RS-232C/ Relay output/ Buzzer (OP-03)	56
17.2	RS-422/ RS-485 / Relay output (OP-04)	57
17.2.1	Communication Format	59
17.2.2	Command List	59
17.3	Internal Printer for Type V (OP-06)	62
18	Specifications	65
19	Maintenance	68
19.1	Repair	68
19.2	Check points Before Calling Maintenance	68

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/AnD/HW-10KGL HW-60KGL HW-100KGL HW-2>

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://the-checkout-tech.com)