

Pipette Accuracy Tester

PT-Series

AD-4212B-PT

AD-4212A-PT

FX-300i-PT

INSTRUCTION MANUAL



CONTENTS

1. INTRODUCTION	2
1-1 Unpacking the Tester	2
1-2 Description of Each Component.....	4
1-3 WinCT-Pipette, Software for Pipette Accuracy Testing.....	4
1-4 Function of the Evaporation Trap	5
2. ASSEMBLING THE TESTER.....	6
2-1 AD-4212B-PT / AD-4212A-PT	6
2-2 FX-300i-PT	8
3. PRECAUTIONS BEFORE USE	10
4. ANTI-STATIC TREATMENT	11
5. INSTALLING WinCT-Pipette	11
6. CONNECTING A PC TO THE BALANCE.....	12
6-1 Connecting a PC	12
6-2 Checking COM Port Numbers.....	13
7. CALIBRATING THE BALANCE	14
7-1 AD-4212B-PT / AD-4212A-PT	14
7-2 FX-300i-PT	15
8. PREPARATION BEFORE USE.....	16
8-1 Filling the Evaporation Trap with Water.....	16
8-2 Preparing the Test Liquid.....	16
8-3 Using the Thermometer.....	17
9. MEASUREMENT	21
9-1 Measuring Procedure	21
9-2 Judging the Results	21
9-3 Example Causes of Measurement Errors	22
10. AD-4212B-PT / AD-4212A-PT	24
10-1 Factory Settings.....	24
10-2 Display Lock Function	25
11. TROUBLESHOOTING	26
12. SPECIFICATIONS.....	27
13. APPENDIX	28

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/AnD/PT-Series instruction manual.html](https://the-checkout-tech.com/manuals/AnD/PT-Series%20instruction%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)