

SC/SE Series

Wash Down Scales

SC-30KAM / SC-60KAM / SC-150KAM / SC-60KAL / SC-150KAL

SE-30KAM / SE-60KAM / SE-150KAM / SE-60KAL / SE-150KAL

INSTRUCTION MANUAL



CONTENTS

1. INTRODUCTION	2
2. FEATURES	2
3. UNPACKING	3
4. DESCRIPTION OF EACH PART	4
4-1. Display and symbols	6
4-2. Switches.....	7
5. SETTING UP	8
5-1. Attaching the display pole to the base	8
5-2. Installing the scale.....	10
5-3. Installing the batteries	11
6. BASIC OPERATION	12
6-1. Turning the power ON and OFF	12
6-2. Selecting a weighing unit.....	12
6-3. Basic weighing operation	13
6-4. Weight display resolution	13
7. COUNTING MODE	14
8. COMPARATOR	15
9. CALIBRATION	17
9-1. Gravity acceleration correction.....	17
9-2. Calibration using a weight	18
9-3. Restoring to the factory setting values	19
10. FUNCTIONS	20
10-1. Setting the parameters.....	20
10-2. Function list	21
11. OPTIONS	22
12. MAINTENANCE	22
12-1. Notes on maintenance	22
12-2. Error codes.....	22
13. SPECIFICATIONS	23
13-1. Specifications	23
13-2. External dimensions	24
GRAVITY ACCELERATION MAP	26

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/AnD/SC and SE Series instruction manual.html](https://the-checkout-tech.com/manuals/AnD/SC%20and%20SE%20Series%20instruction%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)