

SW Series

Super Wash Down Scales

SW-6KS / SW-15KS

SW-15KM / SW-30KM / SW-60KM / SW-150KM

SW-60KL / SW-150KL

INSTRUCTION MANUAL



CONTENTS

1. COMPLIANCE	3
2. INTRODUCTION	4
3. FEATURES	4
4. PRECAUTIONS	5
4.1. Installing the scale	5
4.2. Operating the scale	5
4.3. Cleaning the scale	5
5. UNPACKING	6
6. DESCRIPTION OF EACH PART	7
6.1. Display and symbols	8
6.2. Switches	9
7. SETTING UP	10
7.1. Attaching the display pole to the base	10
7.2. Installing the scale	11
8. BASIC OPERATION	12
8.1. Turning the power ON and OFF	12
8.2. Selecting a weighing unit.....	13
8.3. Basic weighing operation.....	13
8.4. Weight display resolution.....	14
9. COUNTING MODE	15
10. COMPARATOR	16
10.1. The formula to compare	16
10.2. Entering the comparator values.....	18
11. CALIBRATION	19
11.1. Gravity acceleration correction	19
11.2. Calibration using a weight.....	20
11.3. Restoring the factory set values.....	21
12. FUNCTIONS	22
12.1. Setting the parameters	22
12.2. To restore the function settings to the factory setting values	22
12.3. Function list	23

13. OPTIONS	25
13.1. Using the OP-02 SLA battery	25
13.1.1. Installing the battery.....	25
13.1.2. Charging the battery	26
13.2. OP-03 RS-232C / RELAY OUTPUT	27
13.2.1. Installing OP-03	27
13.2.2. OP-03 Specifications	28
13.2.3. Command mode.....	31
13.3. OP-04 RS-422 / 485	34
13.3.1. Installing OP-04	34
13.3.2. OP-04 Specifications	35
14. MAINTENANCE	38
14.1. Notes on maintenance.....	38
14.2. Error codes	38
15. SPECIFICATIONS	39
15.1. Specifications	39
15.2. External dimensions	41
GRAVITY ACCELERATION MAP	43

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*