
Avery Berkel A-402 A-405 A-421 A-425 CX-16 CX-17 CX-18 CX-19 user Manual

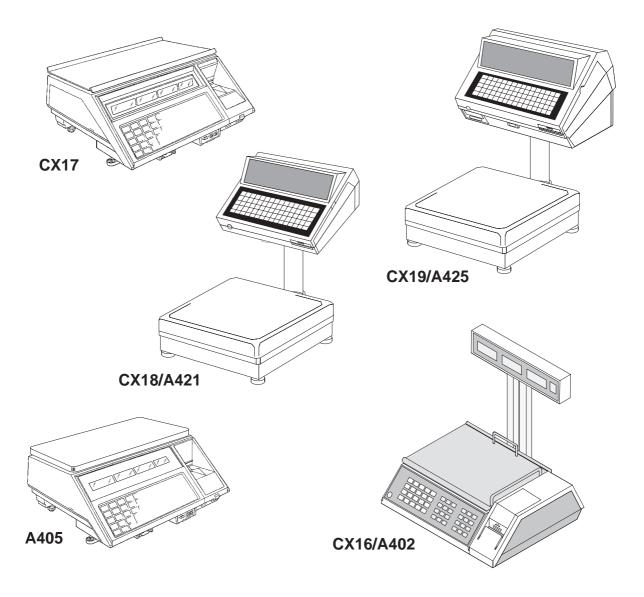

CX16/A402 CX17/A405 CX18/A421 CX19/A425

User Instructions



Description

	Description		1–1
	Features		1–3
	The Printer		1—4
		Description	1–4
	External Fittings		1–7
		Switches, sockets and fuses	1–7
		Mains cable	1–8
	Legal Requireme	ents	1—9
Installation			
	Installation		2–1
		Position the scale	2–1
		Level the scale	2–1
		Switch the scale on	2–2
Serving Cus	tomers		
<u></u>	Getting Started		3–1
		Switching the Scale On	3–1
		Bleeping scale	3–1
	Displays and Ind	· · ·	3–2
	Operator Keyboa		3–3
		Numeric, operator and PLU keys	3–3
		Function keys	3–4
	Printing		3–5
	<u> </u>	Printing a receipt	3–5
		Displaying the customer's change	3–5
		Printing a label (CX17/A405/CX19/A425 only)	3–6
		Advancing the printer roll	3–6
		Changing the printer roll	3–6
		Changing the printer cassette (CX17/A405 only)	3–6
	Selecting Receip	t or Label Mode (CX17/A405/CX19/A425 only)	3–7
	Zeroing the Scale		3–7
		Operator Subtotal	3–7
	Typing in the Price		3–8
		Unit price (weighed goods)	3–8
		Item price (non–weighed items)	3–8
	Changing the Nu	Imber of Items	3–8
	Using PLUs		3–9
		Weighed goods	3–9
		Non–weighed items	3–9

	Overriding the Prices	Overriding the Prices of PLUs	
	Ļ	Jnit price	3–10
	<u> 1</u>	tem price	3–10
	Using Tares		3–11
	F	ree tare	3–11
	C	Cumulative tare	3–12
	k	Keyboard entered tare	3–13
	F	Proportional tare	3–14
	Retaining a PLU		3–15
	V	Veighed goods	3–15
	Ν	lon–weighed item	3–16
	Retaining a Unit Price	ce	3–17
	Returning Non-weig	hed Items	3–18
	Voiding Transactions		3–18
	Add Labels (CX17/A	abels (CX17/A405/CX19/A425 only) Messages and Displays	
	Error Messages and		
	L	Inderrange condition	3–21
	C	Dverrange condition	3–21
	Ē	ail to balance	3–21
	<u>c</u>	Change weight	3–21
	V	Veight unsteady	3–21
	F	Print total (CX17/A405/CX19/A425 only)	3–21
	Switching the Scale	Off	3–21
Pre-pack	ng (CX17/A405/CX	19/A425 only)	
	Pre-packing		4–1
	Setting the Machine	Setting the Machine to Pre-pack	
	Pre-pack Operation	S	4–2

Setting the Mach	nine to Pre-pack	4–1
Pre-pack Opera	tions	4–2
	Weighed goods	4–2
	Non-weighed items	4–2
Tares		4–3
	Free tare	4–3
	Preset tare	4–4
	Keyboard entered tare	4–5
	Proportional tare	4–6
Multiple Labels		4–7

Programming

Fitting the Progra	amming Keyboard Overlay (CX17/A405/CX18/A421/CX19/A425 only)	5–1
Entering Program	nming Mode	5–1
Displays and Ind	licators	5–2
Programming Ke	eyboard	5–3
Programming Me	enu	5–5
	Flowchart	5–5
	Flowchart	5–6
	Description of options	5–7
	Moving around the programming menu	5–9
Text Editing		5–10
	Receipt and label text	5–10
	What the text editing display means	5–10
	Displayed text	5–11
	Changing the font size	5–12
Creating and Ed	iting a PLU	5–13
Editing the Sign	On Text	5–16
Editing the Sign	Off Text	5–16
Editing the Store	Name Text	5–16
Editing the Add I	_abel	5–16
Editing the Lege	nd	5–16
Changing the PI	N Number	5–17
Selecting the Lal	bel Format (CX17/A405/CX19/A425 only)	5–17
Changing the Machine ID Number		5–18
Assigning a PLU	to a Commodity Key	5–18
Assigning an Op	erator Key	5–19
Assigning a Tare	кеу	5–19
Assigning a Dua	I Capacity Key	5–20
Assigning a Prop	portional Tare Key	5–20
Selecting the Type	pe of Printer Roll (CX17/A405/CX19/A425 only)	5–21
Selecting the Pri	nt Mode (CX17/A405/CX19/A425 only)	5–21
Selecting the Tal	on	5–21
Switching the Function Keys On and Off		5–22
Setting Up Net Weights and Tares		5–23
	Net weights	5–23
	Stored tare weights	5–23
	Proportional tare	5–24

Selecting and Editing the Barcode Format		5–25
	Receipt	5–25
	Label (CX17/A405/CX19/A425 only)	5–26
Barcode Form	at Tables	5–27
	Barcode digits – EAN8	5–27
	Barcode digits – UPC12	5–28
	Barcode digits – UPC13	5–29
	Barcode digits – EAN13	5–30
	Barcode digits – EAN13 (Scandinavian)	5–31
	Barcode digits – source marked barcodes	5–32
Changing the	Time and Date	5–33
	Time	5–33
	Date	5–33
Changing the I	Price of a PLU	5–34
Changing the	Trace Code	5–34
Assigning a Ta	x Rate to a Tax Code	5–35
Printing the PLU Totals		5–36
Printing the Op	perator Totals	5–37
Printing the Gr	and Totals	5–38
Printing a PLU	List	5–39
Clearing Trans	sactions	5–40
Clearing PLUs		5–40
Using the DCL	J	5–41
	Dumping system data	5–41
	Loading system data	5–42
	Dumping machine data	5–42
	Loading machine data	5–42
	Dumping PLU data	5–42
	Loading PLU data	5–42
	Dumping totals data	5–42
	Dumping label data	5–42
	Loading label data	5–42
	DCU compatibility data	5–43
Error Message	·	5–43
	Communications error	5–43

Networking

Features		6–1	
Checking Con	Checking Configuration Network setup Configuring the network		
Network setup			
Configuring the			
Scale operatio	Scale operation		
Network mess	ages	6–3	
	Wait	6–3	
	Print total	6–4	
	'N code1'	6–4	
	'N code 2'	6–4	
	'N code 3'	6–4	
	'N code 9'	6–4	
	'N code 10'	6–5	
	'N code 11'	6–5	
Routine Maintenance			
Changing a Pr	inter Roll	7–1	

7–1
7–1
7–4
7–7
7–8
7–9
7–11

This is a "Table of Contents preview" for quality assurance

The full manual can be purchased from our store: https://the-checkout-tech.com/manuals/avery berkel/A-402 A-405 A-421 A-425 CX-16 C

And our free Online Keysheet maker: https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/

HTTPS://THE-CHECKOUT-TECH.COM