




# SERVICE MANUAL

## CX20, CX30 AND CX34 SERIES

### RETAIL SCALES

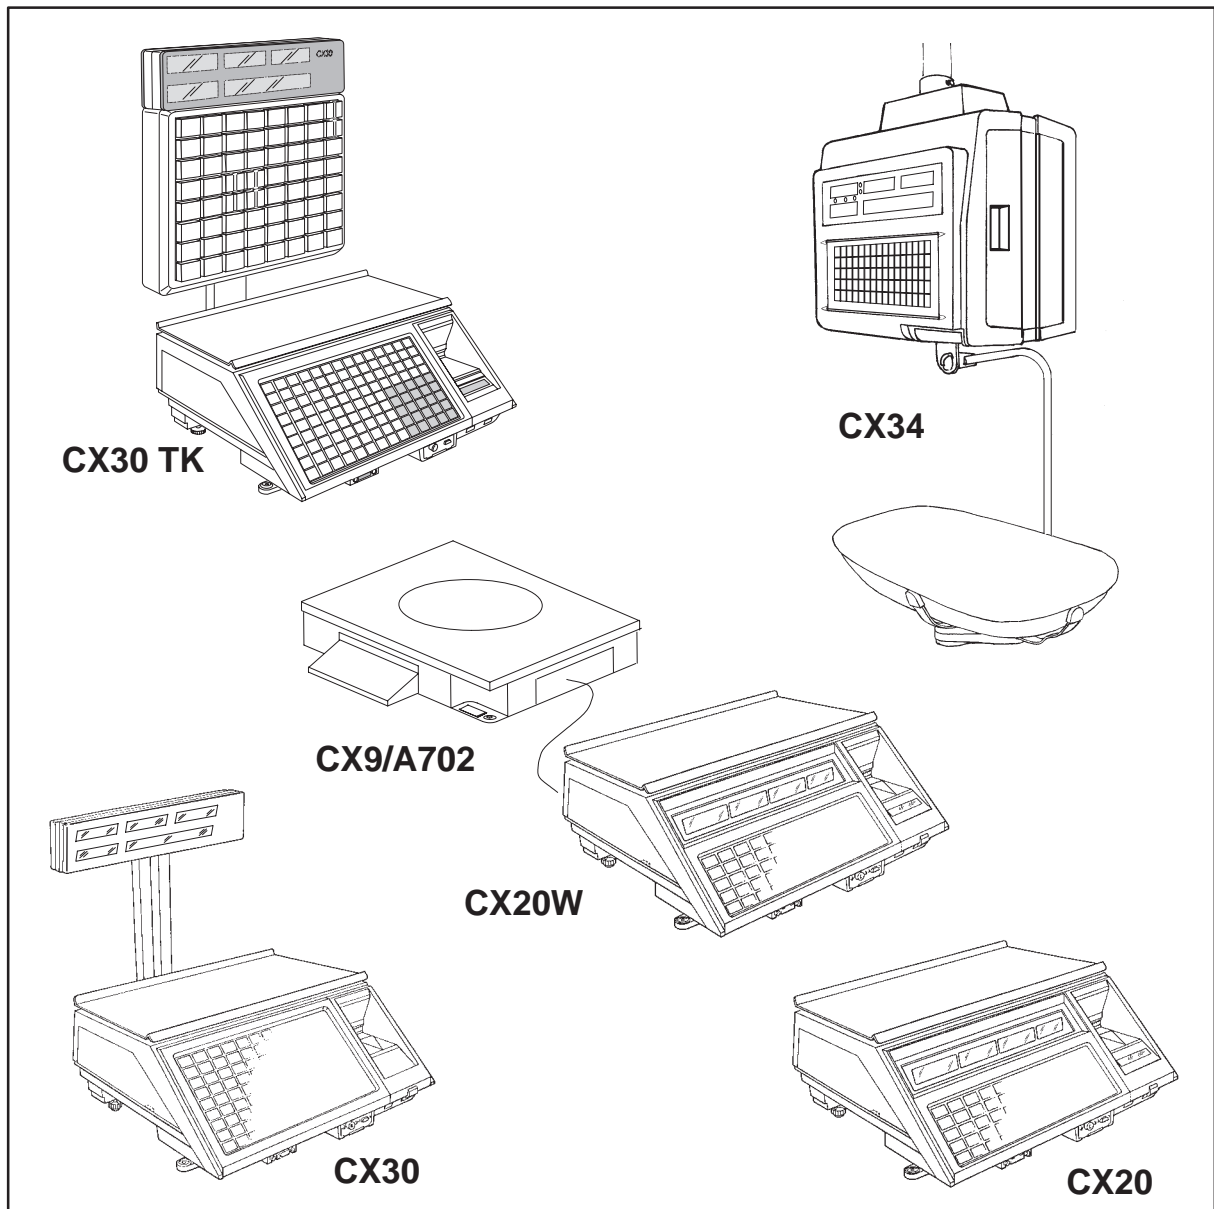

# Contents

---

## *Table of Contents:*

**About This Manual**

**Amendment Sheet**

**Abbreviations**

**Overview**

<b>1</b>	<b>Introduction</b>	1-1
1.1	General	1-3
	1.1.1 CX20	1-4
	1.1.2 CX20 W	1-5
	1.1.3 CX30	1-5
	1.1.4 CX30 TK	1-6
	1.1.5 CX34	1-6
1.2	General Data	1-7
<b>2</b>	<b>General and Technical</b>	2-1
2.1	Mechanical Description	2-3
	2.1.1 CX20/CX30	2-3
	2.1.2 CX20 W and CX9/A702	2-7
	2.1.3 CX34	2-11
2.2	Electrical Description	2-13
2.3	Networking	2-14
2.4	Built-in Test Equipment	2-14

# Contents

---

<b>3</b>	<b>Disassembly and Assembly</b>	3-1
3.1	Introduction	3-3
3.2	Servicing the CX20/CX30	3-3
3.2.1	Removing the case	3-3
3.2.2	Fitting the case	3-4
3.2.3	Replacing the keyswitch	3-4
3.2.4	Replacing the DCU/remote keyboard connector	3-4
3.2.5	Replacing the LCD (CX20)	3-5
3.2.6	Removing external connector plate	3-6
3.3	Servicing the CX20 W and CX9/A702	3-8
3.3.1	Removing the case (CX20 W)	3-8
3.3.2	Fitting the case (CX20 W)	3-9
3.3.3	Replacing the keyswitch (CX20 W)	3-9
3.3.4	Replacing the DCU/remote keyboard connector (CX20 W)	3-9
3.3.5	Replacing the LCD (CX20 W)	3-10
3.3.6	Removing external connector plate (CX20 W)	3-10
3.4	Servicing the CX34	3-12
3.4.1	Removing the housings	3-12
3.4.2	Fitting the housings	3-13
<b>4</b>	<b>Installation (CX20 W)</b>	4-1
4.1	Introduction	4-3
4.2	Installation	4-3
4.2.1	Approvals and stamping	4-4
<b>5</b>	<b>Setting Up Procedures</b>	5-1
5.1	Introduction	5-4
5.2	Service mode	5-5
5.2.1	Entering service mode using the SAC number	5-5
5.2.2	Entering service mode using the DIL switch	5-7
5.3	Configuration (Menu Option)	5-7
5.4	Calibration (Menu Option)	5-7
5.5	Clear Memory (Menu Option)	5-8
5.6	Format Memory (Menu Option)	5-9
5.7	Test Weight (Menu Option)	5-10
5.8	Test Diagnostics (Menu Option)	5-10
5.9	SAC Number (Menu Option)	5-11
5.10	Print Density (Menu Option)	5-12
5.11	Label Formats (Menu Option)	5-13
<b>6</b>	<b>Configuration</b>	6-1
6.1	Introduction	6-3
6.2	Configuration procedure	6-3
6.2.1	Configuring the machine	6-3
6.2.2	Configuration Option Tables	6-5

<b>7</b>	<b>Calibration and Adjustments</b>	7-1
7.1	Introduction	7-3
7.2	Adjustment of Overload Stops (CX20/CX30)	7-3
7.2.1	Adjustment of Asymmetric Overload Stops	7-3
7.3	Adjustment of Overload Stops (CX9/A702)	7-3
7.4	Adjustment of Overload Stops (CX34)	7-3
7.5	Calibration	7-4
<b>8</b>	<b>Testing</b>	8-1
8.1	Introduction	8-3
8.2	Date/time Entry (Menu Option)	8-4
8.3	Scale Test (Menu Option)	8-5
8.3.1	Processor test (menu option)	8-6
8.3.2	Static RAM test (menu option)	8-7
8.3.3	ROM test (menu option)	8-8
8.3.4	EEPROM test (menu option)	8-9
8.3.5	Display test (menu option)	8-10
8.3.6	Keyboard test (menu option)	8-11
8.3.7	Comms test (menu option)	8-13
8.3.8	Weighing test (menu option)	8-15
8.4	System Load Test (Menu Option)	8-16
8.4.1	Loading the system	8-16
8.4.2	Measuring on the machine	8-18
<b>9</b>	<b>Label Formats</b>	9-1
9.1	Introduction	9-3
9.2	Labels	9-4
9.2.1	Label format	9-4
9.2.2	Label fields	9-5
9.2.3	Label field co-ordinates	9-6
9.2.4	Label start point	9-7
9.2.5	The offset (90 and 180 degree formats only)	9-8
9.2.6	Determining the Start Point of a 90 Degree Format	9-9
9.2.7	Determining the Start Point of a 180 Degree Format	9-10
9.2.8	Text fonts	9-11
9.2.9	References	9-11
9.3	Creating a New Label Format	9-12
9.3.1	Design	9-12
9.3.2	Determining the label field co-ordinates	9-13
9.3.3	Programming	9-13
9.3.4	Example – creating a new 0 degree label format	9-14
9.4	Edit Format (Menu Option)	9-20
9.5	Clear Format (Menu Option)	9-25
9.6	Copy Format (Menu Option)	9-26
9.7	Print Format (Menu Option)	9-27

# Contents

---

<b>10</b>	<b>Error Messages</b>	10–1
10.1	Commodity Display Error Messages	10–3
10.2	TEST REPORT Error Number	10–13
<b>11</b>	<b>Main PCB</b>	11–1
11.1	Description	11–3
11.2	Servicing	11–6
11.2.1	Removing the main PCB (CX20/CX30)	11–6
11.2.2	Fitting the main PCB (CX20/CX30)	11–6
11.2.3	Removing the main PCB (CX20 W)	11–10
11.2.4	Fitting the main PCB (CX20 W)	11–10
11.2.5	Removing the main PCB (CX34)	11–11
11.2.6	Fitting the main PCB (CX34)	11–11
11.2.7	Replacing the main PCB	11–14
<b>12</b>	<b>Display (CX20)</b>	12–1
12.1	Description	12–3
12.2	Testing	12–4
12.3	Servicing	12–5
12.3.1	Removing an integral display PCB	12–5
12.3.2	Fitting an integral display PCB	12–5
12.3.3	Removing a tower mounted display PCB	12–6
12.3.4	Fitting a tower mounted display PCB	12–6
<b>13</b>	<b>Display (CX30/CX34)</b>	13–1
13.1	Description	13–3
13.2	Testing	13–5
13.3	Configuration Data	13–5
13.4	Servicing	13–10
13.4.1	Removing a display PCB (CX30)	13–10
13.4.2	Fitting a display PCB (CX30)	13–10
13.4.3	Removing a display assembly (CX30)	13–11
13.4.4	Fitting a display assembly (CX30)	13–12
13.4.5	Removing a display PCB (CX34)	13–12
13.4.6	Fitting a display PCB (CX34)	13–13
<b>14</b>	<b>Keyboard</b>	14–1
14.1	Description	14–3
14.2	Testing	14–4
14.3	Servicing	14–4
14.3.1	Removing a keyboard (CX20/CX30)	14–4
14.3.2	Fitting a keyboard (CX20/CX30)	14–5
14.3.3	Removing a keyboard (CX34)	14–5
14.3.4	Fitting a keyboard (CX34)	14–6
<b>15</b>	<b>CX30 TK Machine</b>	15–1
15.1	General	15–3
15.2	Mechanical Description	15–3
15.3	Electrical Description	15–4

15.4	Keyboard Controller PCB	15–4
15.4.1	Circuit description	15–4
15.4.2	Power Supplies	15–4
15.4.3	Links	15–5
15.5	Servicing	15–8
15.5.1	Removing the customer keyboard	15–8
15.5.2	Replacing the customer keyboard	15–8
15.5.3	Removing the keyboard controller PCB	15–8
15.5.4	Fitting the keyboard controller PCB	15–9
15.5.5	Removing the keyboard assembly	15–9
15.5.6	Fitting the keyboard assembly	15–9
15.5.7	Removing the switch PCB loom	15–10
15.5.8	Fitting the switch PCB loom	15–10
<b>16</b>	<b>Power Supply Unit</b>	16–1
16.1	Description	16–3
16.2	Servicing	16–4
16.2.1	Gaining access to the power supply unit (CX20/CX30)	16–5
16.2.2	Gaining access to the power supply unit (CX34)	16–6
16.2.3	Replacing a fuse	16–7
<b>17</b>	<b>Transducer</b>	17–1
17.1	Description	17–3
17.1.1	Transducer Assembly CX20/CX30	17–3
17.1.2	Transducer Assembly CX34	17–4
17.1.3	Suspension Assembly CX34	17–4
17.2	Testing	17–6
17.3	A/D PCB	17–6
17.4	Servicing	17–7
17.4.1	Removing the transducer (CX20/CX30)	17–7
17.4.2	Fitting the transducer (CX20/CX30)	17–7
17.4.3	Removing the transducer (CX34)	17–7
17.4.4	Fitting the transducer (CX34)	17–8
<b>18</b>	<b>CX9/A702 Remote Weighing Platform</b>	18–1
18.1	Description	18–3
18.2	Specifications	18–5
18.3	Servicing	18–5
18.3.1	Special Tool (15221)	18–5
18.3.2	Removing a transducer	18–5
18.3.3	Fitting the transducer	18–6
18.3.4	Using the C117 Special Tool	18–8
<b>19</b>	<b>Receipt Printer</b>	19–1
19.1	Description	19–3
19.2	Test and Adjustment	19–4
19.3	Servicing	19–4
19.3.1	Removing the printer (CX20/CX30)	19–4
19.3.2	Fitting the printer (CX20/CX30)	19–5
19.3.3	Removing the printer (CX34)	19–5

# Contents

---

19.3.4	Fitting the printer (CX34)	19-6
19.3.5	Cleaning the print head	19-6
19.3.6	Changing the print head	19-6
19.3.7	Changing the microswitch	19-7
19.3.8	Disassembling the printer	19-7
19.3.9	Assembling the printer	19-7
<b>20</b>	<b>Label and Receipt Printer</b>	<b>20-1</b>
20.1	Description	20-3
20.2	Test and Adjustment	20-5
20.3	Servicing	20-6
20.3.1	Removing the printer (CX20/CX30)	20-6
20.3.2	Fitting the printer (CX20/CX30)	20-6
20.3.3	Removing the printer (CX34)	20-7
20.3.4	Fitting the printer (CX34)	20-7
20.3.5	Cleaning the print head	20-7
20.3.6	Changing the take-up motor	20-7
20.3.7	Changing the stepper motor	20-8
20.3.8	Changing the friction roller	20-8
20.3.9	Changing the print head	20-9
20.3.10	Changing the photodetector	20-10
20.3.11	Changing the printer mechanism	20-10
<b>21</b>	<b>Networking</b>	<b>21-1</b>
21.1	Networking	21-3
21.1.1	Network cabling	21-4
<b>22</b>	<b>Communications Controller</b>	<b>22-1</b>
22.1	Description	22-3
22.1.1	C918 external comms controller unit	22-4
22.2	Network Connections	22-4
22.2.1	Dual comms controller operation	22-5
22.3	Comms PCB – Main Components	22-6
22.4	Servicing	22-10
22.4.1	C918 external comms controller unit	22-10
<b>23</b>	<b>RS232 Interface PCB (CX20 W)</b>	<b>23-1</b>
23.1	General	23-3
23.2	Circuit Description	23-4
23.2.1	RS232 interface	23-4
23.2.2	Wrapper control signal interface	23-4
23.2.3	Wrapper ready signal (control interface version 2 only)	23-4
23.2.4	Scale in control signal (control interface version 2 only)	23-5
23.2.5	Analogue interface	23-5
23.2.6	“Wrapper Start” relay control	23-5
23.2.7	Label taken detection	23-5
23.2.8	ULMA 200 series wrapper protocol	23-6
23.2.9	Serial interface devices	23-6
23.3	Servicing	23-7
23.3.1	Replacing the RS232 interface PCB	23-7

<b>24</b>	<b>Wiring Interconnections</b>	24–1
24.1	CX20/CX30	24–3
24.2	CX20 W	24–8
<b>25</b>	<b>Appendices</b>	25–1
25.1	Configuration Option Tables for Old Software	25–3
	25.1.1 Option Tables for Mod.3 Software Release	25–3
	25.1.2 Option Tables for Pre–Phase 1.2 Software Release	25–7
25.2	Label Formatting	25–17
	25.2.1 Calculating the offset	25–17
	25.2.2 Field data tables	25–18

## Parts List

## List of Figures

Figure 1.1	General View (Integral Displays)	1–4
Figure 1.2	General View (Column–mounted Displays)	1–4
Figure 1.3	General View (CX20 W)	1–5
Figure 1.4	General View (CX30)	1–5
Figure 2.1	Exploded View (CX20) – R Version	2–3
Figure 2.2	Exploded View (CX30) – LS/ECR Version	2–4
Figure 2.3	Scale Base – Plan View (CX20/CX30)	2–6
Figure 2.4	ULMA Wrapping Machines	2–7
Figure 2.5	Exploded View (CX20 W)	2–8
Figure 2.6	Exploded View (CX9/A702)	2–9
Figure 2.7	Scale Base – Plan View (CX20 W)	2–10
Figure 2.8	Exploded View (CX34)	2–11
Figure 3.1	Unit Interior (CX20) – View on Front, Right Corner	3–5
Figure 3.2	External Connector Plate – View from above	3–7
Figure 3.3	External Connector Plate (CX20 W) – View from above	3–11
Figure 5.1	Service Mode Flowchart	5–3
Figure 5.2	Menu in Service Mode	5–4
Figure 8.1	Menu of Test Diagnostics (Service Mode)	8–3
Figure 8.2	Menu of Scale Test	8–5
Figure 8.3	Link Fittings to Echo Plugs (D–type Connectors)	8–13
Figure 9.1	Label Formats Menu	9–3
Figure 9.2	Sample Label and Label Fields – 0 Degree Format	9–5
Figure 9.3	Label Start Points (0, 90 and 180 Degree Labels)	9–7
Figure 9.4	Effect of the Offset (90 Degree Label)	9–8
Figure 9.5	Determining the Start Point (90 Degree Format)	9–9
Figure 9.6	Determining the Start Point (180 Degree Format)	9–10
Figure 9.7	Example of Completed Field Measurements Table	9–18
Figure 9.8	Example of Completed Programmed Data Table	9–19
Figure 9.9	Co–ordinates (Commodity Display)	9–20
Figure 11.1	Main PCB – Electrical Connections	11–4
Figure 11.2	Main PCB – DIL Switches and Potentiometers	11–8
Figure 11.3	Main PCB – Location of Links	11–12
Figure 11.4	Main PCB – Location of Integrated Circuits	11–15
Figure 12.1	Display – FIP Type (CX20)	12–3



## Contents

---

Figure 12.2	Display Brackets	12–4
Figure 13.1	Display (CX30)	13–3
Figure 13.2	Display (CX34)	13–4
Figure 13.3	Display PCB (Metric Multi–line)	13–4
Figure 13.4	Display PCB – Switches and LEDs	13–5
Figure 13.5	Display (CX30) – Exploded	13–11
Figure 14.1	Keyboard	14–3
Figure 14.2	Keyboard Earthing Arrangement	14–6
Figure 15.1	Keyboard Controller PCB – Communication Loom Connections	15–5
Figure 15.2	Keyboard Controller PCB – Links	15–6
Figure 15.3	Keyboard Controller PCB – Pin Signals	15–7
Figure 16.1	Power Supply PCB – Component Highlight	16–3
Figure 17.1	Transducer Assembly (CX20/CX30)	17–3
Figure 17.2	Suspension Assembly (CX34)	17–5
Figure 17.3	A/D PCB Connections (component side)	17–6
Figure 18.1	CX9/A702 Remote Weighing Platform	18–3
Figure 18.2	CX9/A702 – Exploded View	18–4
Figure 18.3	Special Tool (15221)	18–5
Figure 18.4	Removing the transducer using the 15221	18–6
Figure 18.5	Fitting the transducer using a 15221	18–7
Figure 18.6	Special Tool (C117)	18–8
Figure 18.7	Using the Special Tool (C117)	18–8
Figure 19.1	Ticket Printer (CX20/CX30)	19–3
Figure 20.1	Label and Receipt Printer (CX20/CX30)	20–3
Figure 21.1	Network Connections	21–3
Figure 21.2	Cable Screen Connection	21–4
Figure 22.1	Network Connections (with Communications Controller)	22–4
Figure 22.2	Comms PCB – Component Highlight	22–6
Figure 22.3	Comms PCB – Links LK1, LK6, LK7	22–8
Figure 22.4	Comms PCB – Switch Settings	22–9
Figure 23.1	RS232 Interface PCB	23–3
Figure 24.1	Connector Pins on Main PCB – PL6, PL8 and PL13	24–3
Figure 24.2	Connector Pins on Main PCB – PL2, PL9, PL12 and PL15	24–4
Figure 24.3	Connector Pins on Main PCB – PL7, PL14, PL17, PL18 and SK1	24–5
Figure 24.4	Connector Pins on Main PCB – PL20, PL19 and PL16	24–6
Figure 24.5	Connector Pins on Main PCB – PL3	24–7
Figure 24.6	PCB Interconnection Diagram (CX20 W)	24–8
Figure 24.7	Connector Pins on RS232 PCB (CX20 W) – PL1, PL2 and PL5	24–9
Figure 24.8	Connector Pins on RS232 PCB (CX20 W) – PL3, PL4, PL7, PL8, TB1 and TB2	24–10

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/avery berkel/A-702 and CX-9 CX-20 CX-20W CX](https://the-checkout-tech.com/manuals/avery%20berkel/A-702%20and%20CX-9%20CX-20%20CX-20W%20CX-20W)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)