



## Conveyor Scale Installation Manual

# Table of Contents

Description .....	5
Options .....	5
Features .....	6
Installation .....	6
Installation Recommendations .....	7
Checking Scale Function .....	8
Operating the Conveyor Scale .....	8
Balancing Weigh Bars Routed Through a Junction Box .....	9
Photocells and Connections .....	10
Photocell Programmable Modules .....	11
Optional DC Motor Speed Control Wiring .....	11
Appendix A: WI-110/WI-120 Information .....	12
Serial ASCII Output .....	12
Wiring .....	12
Appendix B: WI-130 Information .....	15
Setpoints .....	15
8587A Photocell I/O Installation Configuration .....	15
Operation .....	15
WI-130 Main Board I/O Configuration .....	15
SSCU-8 Remote Expanded I/O Configuration .....	15
WI-130 to I/O Expansion Board Cable Connections .....	16
Photocell Connections .....	16
Appendix C: WI-127 Information .....	17
WI-127 In-motion wiring .....	17

**Pages are numbered consecutively beginning with the cover page.**

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*