

Service Instructions

FX210/FX220



Table of contents

Removing the covers	1
Installing expansion boards	2
Installing a head-up display	3
Status display	4
Error messages	5
Configuring the scale	6
Management mode	6
Restricted service access	6
Full service access	7
Verification mode	7
Exiting from full or restricted service access	8
Navigating service mode	9
Product configuration branches	10
Branch 0 - Edit counter	10
Branch 5 - Typical configurations	10
Branch 6 - Weighing functionality	11
Branch 7 - Weighing limits	12
Branch 08 - Gravity compensation	13
Branch 09 - Weight display	13
Branch 19 - Bleeper functions	14
Branch 20 - Power saving	14
Branch 29 - Key press duration	14
Branch 60 - Tares	15
Branch 61 - Currencies	16
Branch 62 - Main currency	16
Branch 63 - Main currency, dual currency conversion	17
Branch 64 - Alternate currency (Euros)	17
Branch 100 - PLUs	19
Calibration	20
Aborting calibration	21
Euro conversion procedure	22
Replacing a head-up display	23
30kg scales	24
Stiffener plate	24
Base covers	24
Illustrated parts list	25
Head-up display	26
Wiring diagram	27

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/avery berkel/FX-210 and FX-220 service manual](https://the-checkout-tech.com/manuals/avery_berkel/FX-210_and_FX-220_service_manual/)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)