

## G207

# WEIGHING AND COUNTING MACHINE

## **USER INSTRUCTIONS**

76101-471 Issue 2

22.04.93

## **Contents**

### Table of Contents:

1 Introduction	•
Introduction Available options Description	1 –3 1 –3 1 –4
2 Safety	
Safety	2 –3
Installation	2 –3
Connections	2-4
3 Operation	
General Operation	3 –5
Switching On	3 –6
Displays and Controls Displays Annunciators Function keypad QWERTY keypad Numeric keypad	3 -7 3 -7 3 -7 3 -8 3 -9
Entering Data and Editing Keypad data entry Bar code reader data entry	3 -11 3 -11 3 -11
Summary Of Scale Functions Available	3 –13
G207 User Instructions	

modes of Operation	3-15
Operator mode	3 –15
Supervisor set up mode of operation	3 –15
Entering supervisor set up mode	3 –15
Using the Function Keys	3 –17
Cancelling an operation	. 3 –17
To zero the scale	3 –17
Printing	3 –18
Display testing	3 –18
Select scale	3 –18
Re-call information	3 –19
To view piece weight	3 –19
Re-call other types of information	3 –19
Using the piece weight key	3 –20
Target count alarm	3 –20
Entering a part number	3 –20
Record look up	3 –21
Using memory records:	3 –21
Tare Weights	3 –22
Semi-auto tare	3 –22
Pre-set tare	3 –22
Accumulative tares	3 –23
Stored tares	3 –24
Totals	3 –26
Grand totals	3 –26
Using grand totals	3 –27
Batch totals	3 –28
Using batch totals	3 –28
Counting Operations	3 –29
Count by sampling	3 –29
Count by sampling using SMPL 1 key	3 –29
Pre-set sample number of 10 parts	3 –30
Pre-set sample number of 20 parts	3 –30
Counting using a keypad entered sample number	3 –31
Count by sampling using SMPL 2 key	3 –31
Forward sampling	3 –32
Reverse sampling	3 –33
Lot count by reverse sampling	3 –34
Count by using a known piece weight	3 –35
Reverse count using a known piece weight	3 <b>–</b> 35
Lot count using a known piece weight	3 –36
Piece weight changes in an active RLU	3 –37
Batch Counting	3 –38
Batch totals - voids	3 –40

G207 User Instructions

ii

Memory Records	3 –41
Add records	3 –42
Edit records	3 –44
Delete records .	3 –45
Print records	3 –46
Void records	3 –47
Ticket/Label Formats	3 –48
Fixed ticket formats	3 –48
Example of label format A	3 –48
Example label format B	3 –48
Example Label Format C	3 –48
Recommended tickets/labels	3 –48
Selecting a fixed format label	3 –49
Configurable ticket/label formats	3 –50
Selections available for ticket/label formats	3 <del>–</del> 51
Formatting the G207 for a K500 printer	3 –52
To format a ticket/label	3 –57
User fields	3 –61
Summary Of Supervisor Set Up Mode Groups And Levels	3 –64
Counting Accuracy Considerations	3 –66
Sampling accuracy of scale	3 –66
Allowing for container weight	3 –66
Variation of weight of the parts	3 –66
Sample number	3 –66
Re-Sampling	3 –67
Manual re-sampling	3 –67
Semi-auto re-sampling	3 <del>–</del> 67
Stored Tares Considerations:	3 –67
Customer Maintenance	3 –69
Integral weighing pan (local scale):	3 –69
Cleaning	3 –70
General	3 –70
Variants	3 –71
kg/lb Option ·	3 –71
4 Appendix	
Appendix A	
Supervisor Set Up Mode	4 –3
Options flowchart	4 –3

G207 User Instructions

iv

		4 –4
		4 –4
٠.	•	4 –10
		4 –10
		. 4 –11
		4 –15
		4 –15
		4 –15

G207 User Instructions

This is a "Table of Contents preview" for quality assurance

The full manual can be found at <a href="http://the-checkout-tech.com/estore/catalog/">http://the-checkout-tech.com/estore/catalog/</a>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<u>http://the-checkout-tech.com</u>: the biggest supplier of cash register and scale manuals on the net