

**Avery Berkel**

**GX200/GX220/GX250  
Receipt and Label Scales**

**Service Instructions**

76103-183 Issue 1

ENGLISH

10.01.01



# Contents

---

page no

<b>1</b>	<b>Safety</b>	
<hr/>		
<b>1.1</b>	<b>Safety warnings</b>	1-1
	1.1.1 Hazardous voltages	1-1
<b>1.2</b>	<b>Service precautions</b>	1-3
	1.2.1 Handling procedures	1-3
	1.2.2 Main PCB	1-3
	1.2.3 Print head	1-3
<b>2</b>	<b>Getting started</b>	
<hr/>		
<b>2.1</b>	<b>Machine characteristics</b>	2-1
<b>2.2</b>	<b>Printer characteristics - LTP256</b>	2-2
<b>2.3</b>	<b>Installing the Head Up Display</b>	2-3
<b>2.4</b>	<b>Switching on the Scale</b>	2-4
	2.4.1 Error messages	2-4
	2.4.2 Special functions	2-5
<b>2.5</b>	<b>Country select</b>	2-6
<b>2.6</b>	<b>Machine ranges</b>	2-7
<b>3</b>	<b>Adjustment and Configuration</b>	
<hr/>		
<b>3.1</b>	<b>Weight Adjustment</b>	3-1
<b>3.2</b>	<b>Machine configuration</b>	3-4
	3.2.1 MON	3-5
	3.2.2 PD	3-6
	3.2.3 RTOT	3-7
	3.2.4 MON 1	3-7
	3.2.5 PD 1	3-8
	3.2.6 BEEP	3-9
	3.2.7 CONTA	3-10
	3.2.8 FI	3-10

3.2.9	L CASH	3-11
3.2.10	CUT	3-11
3.2.11	EAN H	3-12
3.2.12	GT LED	3-12
3.2.13	DH REP	3-13
3.2.14	ACUM	3-13
3.2.15	TTARE	3-14
3.2.16	SENER	3-15
<b>3.3</b>	<b>Service Utilities</b>	3-16
3.3.1	Zero (balance) the scale	3-16
3.3.2	Initialisation of machine memory	3-16
3.3.3	Total erasure of the machine memory	3-17
3.3.4	Weight test	3-18
3.3.5	Special programming functions	3-18
<b>3.4</b>	<b>Networking</b>	3-21
3.4.1	Setting up a network	3-21
3.4.2	Checking communications	3-22
3.4.3	Copying data between machines	3-23
3.4.4	Cabling details	3-24
<b>4</b>	<b>GX200 Parts</b>	
<hr/>		
<b>4.1</b>	<b>Exploded view of scale</b>	4-1
<b>4.2</b>	<b>Wiring diagram</b>	4-2
<b>4.3</b>	<b>Parts list</b>	4-3
<b>5</b>	<b>GX220 and BK910S Parts</b>	
<hr/>		
<b>5.1</b>	<b>Exploded view of scale</b>	5-1
<b>5.2</b>	<b>Head Up Display (H.U.D.)</b>	5-2
<b>5.3</b>	<b>Wiring diagram</b>	5-3
<b>5.4</b>	<b>Parts list</b>	5-4
<b>6</b>	<b>GX250 and BK920S Parts</b>	
<hr/>		
<b>6.1</b>	<b>Exploded view of scale</b>	6-1
<b>6.2</b>	<b>Head Up Display (H.U.D)</b>	6-2
<b>6.3</b>	<b>Wiring diagram</b>	6-3
<b>6.4</b>	<b>Parts list</b>	6-4

---

## 7 Appendices

---

<b>7.1</b>	<b>Appendix 1 - Converting to Euro</b>	7-1
	7.1.1 Phase 0 or preparatory phase (until January 1999)	7-1
	7.1.2 Phase 1 (from 1 January 1999 until 1 January 2002)	7-1
	7.1.3 Phase 2 (from 1 January 2002 until 1 July 2002)	7-3
	7.1.4 Phase 3 (from 1 July 2002)	7-3
	7.1.5 Setting the exchange rate	7-4
	7.1.6 Examples	7-5
<b>7.2</b>	<b>Appendix 2 – Access codes</b>	7-8
<b>7.3</b>	<b>Appendix 3 – User Summary</b>	7-9

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/avery berkel/GX-200 GX-220 GX-250 service an](https://the-checkout-tech.com/manuals/avery%20berkel/GX-200%20GX-220%20GX-250%20service%20manual.pdf)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)