

M series Retail SystemScales

Part 1 Operator Instructions



Contents

page no

1	Safety	
1.1	Warnings	1-1
Safe installation		1-1
Safe use		1-2
2	About Your Machine	
2.1	Description	2-1
2.2	Using the documentation	2-2
Glossary of symbols used		2-2
2.3	Installation	2-4
Han	dling	2-4
Leve	elling	2-4
Non	-slip feet	2-4
Lega	al Requirements	2-5
2.4	Getting started	2-6
Con	nections/switch positions	2-6
Switching on		2-6
Ope	rator keyboard	2-7
Solving problems		2-7
2.5	Function keys	2-9
3	Serving Customers	
3.1	Basic operations	3-1
Sele	ecting receipt or label mode	3-1
Printing		3-2
Using the LOG key		3-4

3.2	Hand pricing	3-5
Non-	weighed items (item price)	3-6
3.3	Using PLUs	3-7
Using	3-7	
Prom	3-7	
Weigh	ned goods	3-8
Non-weighed items		3-9
3.4	Barcode scanning	3-10
Checl	kout mode	3-11
3.2	Displaying euro prices	3-13
Printir	ng euro prices	3-14
3.5	Overriding prices	3-15
Weighed goods Nonweighed items		3-15
		3-16
3.7	Voiding a transaction	3-17
Checl	kout mode	3-17
4	Using Tares	
4.1	Free tare	4-1
Cumu	ılative tare	4-2
4.2	Keyboard entered tare	4-3
4.3	Preset tare keys	4-4
5.2	Paying for goods	
Printir	ng a sales receipt	5-3
Using	payment (ECR) keys	5-5
Single	e payment	5-5
Multiple or split payment Paying with foreign currency		5-8
		5-9
5	Working in Receipt Mode	
Displa	aying your operator subtotal	5-1

5.1	Printing a receipt	5-1
Cour	5-1	
5.2	Paying for goods	5-3
Print	ing a sales receipt	5-3
Usin	g payment (ECR) keys	5-5
Sing	Using payment (ECR) keys Single payment Multiple or split payment Paying with foreign currency 5.3 Customer accounts Charging to account Payments received on account 5.4 Sales discount 5.5 Printing euro prices Printing a euro receipt 5.6 Cash drawer operations. 5.7 Refunds 5.8 Returning products	5-5
Multi	ple or split payment	5-8
Payii	ng with foreign currency	5-9
5.3	Customer accounts	5-11
Char	ging to account	5-11
Payr	nents received on account	5-15
5.4	Sales discount	5-18
5.5	Printing euro prices	5-20
Printing a euro receipt		5-20
5.6	Cash drawer operations.	5-22
5.7	Refunds	5-28
5.8	Returning products	5-30
5.9	Using the FIX key	5-33
Weig	hed goods	5-33
Reta	ining a unit price	5-34
6	Working in Label Mode	
6.1	Using the FIX key	6-1
Weig	hed goods	6-1
Reta	6-2	
6.2	Using the ADD key	6-4
Weig	hed goods and nonweighed items	6-4
6.3	Returning products	6-6

	Pre-pack Operations	
7.1	Setting the machine to pre-pack	7-1
Using	g the FIX key	7-2
7.2	Using PLUs	7-3
Weig	hed goods	7-3
Nonv	Nonweighed items	
7.3	Using tares	7-5
Free	tare	7-5
Stored tares		7-6
Keyboard entered tare		7-8
Prop	ortional tare	7-9
7.4	Preset tare keys	7-10
7.5	Multiple labels	7-11
7.6	Returning labels	7-13
7.7	Using the NON ADD key	7-15
7.8	Using the REWRAP key	7-16
7.9	Using the WRAP key	7-18
7.10	Carcass tracking	7-19
8	The Cassette Printer	
Advancing the printer roll		8-2
Print	er roll dimensions	8-2
8.1	Changing the printer roll	8-3
8.2	Routine maintenance	8-9
Cleaning the print head		8-9
9	The Receipt (Clamshell) Printer	
Adva	uncing the printer roll	9-1
Printer roll dimensions		9-2

Contents

9.1 (Changing the printer roll	9-3
Receipt	t only printer	9-3
9.2 F	Routine maintenance	9-4
Cleaning the print head		9-4
Receipt printer		9-5
Index		

This is a "Table of Contents preview" for quality assurance

The full manual can be purchased from our store:

https://the-checkout-tech.com/manuals/avery berkel/M Series operator manual.html

And our free Online Keysheet maker:

https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/

HTTPS://THE-CHECKOUT-TECH.COM