

# Service Manual

**BIZERBA CS300  
CHECKOUT SCALE**



## General

Instructions for the use of the manual  
Update service  
Technical data, keyboard functions  
System/functional descriptions  
including block diagrams

1

## Service information

SHB amendments for all indices

2

## Troubleshooting

Error messages  
Troubleshooting  
Programming

3

## Spare parts lists

4

## Settings/repair

Disassembly/assembly  
Service menu  
Adjustment, tables  
Peripheral equipment

5

<b>Contents</b> .....	1
<b>1. Instructions for the use of the service manual, update service</b>	1 - 1
Last page of section .....	1 - 2
<b>2. Technical data</b> .....	2 - 1
2.1 Overview of models .....	2 - 1
2.2 Display .....	2 - 2
2.2.1 Complete display unit .....	2 - 2
2.2.2 Display indicating the weight value only (W) .....	2 - 2
2.2.3 Display indicating the weight value, unit price and selling price (P) .....	2 - 3
2.2.4 Display indicating an alphanumeric text line .....	2 - 3
2.3 Possible weighing ranges/resolution .....	2 - 4
2.4 Switching on/off .....	2 - 5
2.5 Operating conditions .....	2 - 6
2.6 Conditions applicable to the place of installation .....	2 - 6
2.7 Standards and directives .....	2 - 7
2.8 Environmental conditions .....	2 - 7
2.9 Power supply .....	2 - 8
2.10 Emission and immunity from noise or disturbance .....	2 - 8
2.11 Radiated electromagnetic field requirements .....	2 - 8
2.12 Electrostatic discharge .....	2 - 8
2.13 Electrical fast transient requirements .....	2 - 9
2.14 Air convection .....	2 - 9
2.15 Cleaning of scale .....	2 - 9
2.16 Installation of BIZERBA equipment and equipment manufactured by subsuppliers	2 - 9
Last page of section .....	2 - 10
<b>3. System description</b> .....	3 - 1
3.1 Overview of hardware .....	3 - 1
Last page of section .....	3 - 8

<b>4.</b>	<b>Functional description</b> .....	<b>4-1</b>
4.1	Functional description of the ADC 200 .....	4-1
4.2	Functional description of displays .....	4-5
4.2.1	Display card .....	4-5
4.2.2	Displays for W and P versions .....	4-6
4.2.3	Displays for the A version .....	4-7
4.3	CPU card .....	4-8
4.4	I/O cards .....	4-9
4.4.1	I/O card 6.110.57.001.00 .....	4-9
4.4.2	I/O card 6.110.57.101.00 .....	4-10
4.4.3	I/O card 6.110.57.321.00 .....	4-11
4.4.4	I/O card 6.110.57.40.100 .....	4-12
4.5	Adapter cable RS 232 - RS 422 .....	4-13
	Last page of section .....	4-14

<b>Contents</b> .....	I
<b>1. Status messages CS</b> .....	1 - 1
Last page of section .....	1 - 4
<b>2. Programming</b> .....	2 - 1
2.1 Menu Pr 1 .....	2 - 2
2.1.1 Pr 1 01: load capacity code .....	2 - 2
2.1.2 Pr 1 02: g-factor .....	2 - 3
2.1.3 Pr 1 03: decimal places .....	2 - 3
2.1.4 Pr 1 04: selling price rounding .....	2 - 4
2.1.5 Pr 1 05: constant (fix) symbol .....	2 - 4
2.1.6 Pr 1 06: tare symbol .....	2 - 5
2.1.7 Pr 1 07: exact zero symbol .....	2 - 5
2.1.8 Pr 1 08: automatic zero setting .....	2 - 6
2.1.9 Pr 1 09: initial zero setting range .....	2 - 6
2.2 Menu Pr 2 .....	2 - 7
2.2.1 Pr 2 01: setting the checkout dialog <i>Comms with each reg.</i> .....	2 - 7
2.2.2 Pr 2 02: mean value forming (sensitivity) .....	2 - 8
2.2.3 Pr 2 03: stabilization zone evaluation .....	2 - 8
2.2.4 Pr 2 04: underload message (error - 115 -) .....	2 - 9
2.2.5 Pr 2 05: maximum load limitation to 12 kg .....	2 - 9
2.2.6 Pr 2 06: display backlighting .....	2 - 10
2.2.7 Pr 2 07: weight display only (version G) .....	2 - 10
2.2.8 Pr 2 08: signal generator .....	2 - 11
2.2.9 Pr 2 09: tare function (from program version 2.00 onwards) .....	2 - 11
2.3 Menu Pr 3 .....	2 - 12
2.3.1 Pr 3 01: checkout protocols .....	2 - 12
2.3.2 Pr 3 02: checkout baud rate .....	2 - 12
2.3.3 Pr 3 03: checkout UART settings .....	2 - 13
2.3.4 Pr 3 07: checking the RS 232 settings .....	2 - 14
2.3.5 Pr 3 09: standard checkout settings .....	2 - 14
2.4 Menu Pr 6 .....	2 - 15
2.4.1 Pr 6 09: switching to EURO <i>Removes "DM" from display.</i> .....	2 - 15
2.5 Menu Pr 7 .....	2 - 16
2.5.1 Pr 7 01: fine-resolution display .....	2 - 16
2.5.2 Pr 7 02: display of the CPU main program version .....	2 - 16
2.5.3 Pr 7 03: display of the load capacity code .....	2 - 16
2.5.4 Pr 7 04: display of the g-factor .....	2 - 17
2.5.5 Pr 7 05: display of active hardware or software sealing .....	2 - 17
2.5.6 Pr 7 07: manufacturing menu / service menu .....	2 - 18
2.6 Menu Pr 8 .....	2 - 19
2.6.1 Pr 8 07: activating of hardware or software sealing .....	2 - 19
Last page of section .....	2 - 20

<b>3. Verification</b> .....	<b>3-1</b>
3.1 General .....	3-1
3.2 E-PASS, I-PASS and R-PASS .....	3-2
3.2.1 Procedures .....	3-2
3.2.2 Official sealing .....	3-3
3.3 Software sealing / hardware sealing .....	3-4
3.3.1 General .....	3-4
3.3.2 Status display .....	3-4
3.3.3 Change of status .....	3-6
Last page of section .....	3-8

<b>Contents</b> .....	I
<b>1. Disassembly/assembly</b> .....	1-1
1.1 Testing of equipment after repair according to VDE 0701 .....	1-1
1.2 Please note .....	1-1
1.2.1 Tools .....	1-1
1.2.2 Plug connections .....	1-1
1.3 Disassembling the display stand .....	1-2
1.4 Disassembling the platform CS 300 TM .....	1-3
1.5 Disassembling the platform CS 300 TE .....	1-4
1.6 Disassembling the platform CS 300 ES .....	1-5
1.7 Disassembling the platform CS 300 ER .....	1-6
1.8 Disassembling the platform CS 300 SL .....	1-7
1.8.1 Mounting/dismounting the weighing system .....	1-7
1.9 Disassembling the platform CS 300 NC .....	1-8
Last page of section .....	1-8
<b>2. Replacement of weighing system</b> .....	2-1
2.1 Please note .....	2-1
2.2 Jumper settings on the ADC 200 .....	2-2
2.3 Overview of weighing systems .....	2-3
2.4 Setting of the central overload stop device .....	2-4
2.4.1 Setting values for the overload stop devices .....	2-4
2.4.2 Setting procedure .....	2-4
2.5 Adjustment (CALIBRATION) .....	2-5
2.5.1 Significance of program stages .....	2-7
2.5.2 Load capacity table .....	2-8
2.6 g-correction .....	2-9
2.6.1 g-correction procedure .....	2-10
2.6.2 g-factor table with Balingen as the adjusting place .....	2-12
2.6.3 Zone mapping .....	2-17
2.6.4 g-factor diagram .....	2-18
2.7 Maximum permissible errors for retail scales .....	2-20
Last page of section .....	2-32
<b>3. Replacement of CPU card</b> .....	3-1
3.1 CS 300 TM, CS 300 TE, CS 300 SL, CS 300 NC .....	3-1
3.2 CS 300 ES, CS 300 ER .....	3-2
3.2.1 Program replacement .....	3-3
Last page of section .....	3-4
<b>4. Replacement of I/O card</b> .....	4-1
4.1 CS 300 TM, CS 300 TE .....	4-1
4.2 CS 300 SL .....	4-2
4.3 CS 300 NC .....	4-3
Last page of section .....	4-4

<b>5.</b>	<b>Replacement of display card</b> .....	5-1
	Last page of section .....	5-2
<b>6.</b>	<b>Replacement of displays</b> .....	6-1
6.1	Displays for design versions W and P .....	6-1
6.2	Displays for design version A .....	6-2
	Last page of section .....	6-2
<b>7.</b>	<b>Adapter cable RS 232 – RS 422</b> .....	7-1
	Last page of section .....	7-2
<b>8.</b>	<b>Installation in cash register (POS) counters</b> .....	8-1
8.1	Fastening of display .....	8-1
8.2	CS 300 TM .....	8-1
8.2.1	General .....	8-1
8.2.2	Cable connectors .....	8-2
8.3	CS 300 TE .....	8-3
8.3.1	General .....	8-3
8.3.2	Cable connections .....	8-4
8.3.3	Installation in the cash register (POS) counter .....	8-4
8.4	CS 300 ES .....	8-5
8.4.1	General .....	8-5
8.4.2	Cable connectors .....	8-6
8.4.3	Installation in the cash register (POS) counter .....	8-7
8.5	CS 300 ER .....	8-8
8.5.1	General .....	8-8
8.5.2	Installation in the cash register (POS) counter .....	8-9
8.5.3	Cable connections (electronics box) .....	8-10
8.6	CS 300 SL .....	8-11
8.6.1	General .....	8-11
8.6.2	Installation in the cash register (POS) counter .....	8-12
8.6.3	Cable connectors .....	8-13
8.7	CS 300 NC .....	8-14
8.7.1	General .....	8-14
8.7.2	Installation in the cash register counter .....	8-15
8.7.3	Cable connections .....	8-16
	Last page of section .....	8-16

5



<b>9.</b>	<b>Installation of scanner in CS 300 ES .....</b>	<b>9 - 1</b>
9.1	Scanner types .....	9 - 1
9.2	Installation positions of scanner .....	9 - 1
9.3	Installation of Scantech RIS 2010 .....	9 - 2
9.4	Installation of TEC LS 700 .....	9 - 5
9.5	Installation of TEC LS 750 .....	9 - 7
9.6	Installation of EL 19 (950LX) .....	9 - 9
9.7	Installation of Spectra Physics 850 SL .....	9 - 11
9.8	Installation of Spectra Physics HS 1250 .....	9 - 13
9.9	Installation of NCR 7880 .....	9 - 15
	Last page of section .....	9 - 16
<b>10.</b>	<b>Connection to cash register (POS) systems .....</b>	<b>10 - 1</b>
10.1	Approved cash register (POS) systems .....	10 - 1
10.2	Software modules approved for cash register (POS) systems .....	10 - 2
10.3	Data dialog, interface .....	10 - 3
10.4	Transmission parameters of the checkout dialogs .....	10 - 4
10.5	Connecting cables .....	10 - 4
10.5.1	RS 232, order No. 71052830000 .....	10 - 4
10.5.2	RS 422, order No. 61376120700 .....	10 - 4
10.6	Test according to manufacturer's verification, single-stage .....	10 - 5
10.7	Marking of SNI BEETLE /50, 3/50, /60, 3/60 .....	10 - 7
	Last page of section .....	10 - 8

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/Bizerba/CS-300 service and calibration manual.h](https://the-checkout-tech.com/manuals/Bizerba/CS-300%20service%20and%20calibration%20manual.h)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)