


# CAU SERIES

Electronic Balance

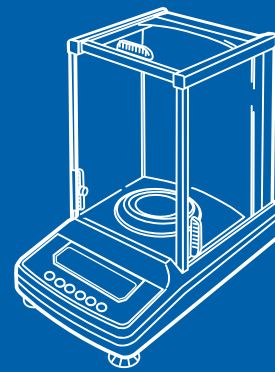

[www.globalcas.com](http://www.globalcas.com)

**OWNER'S MANUAL**

# CAS


# Contents

## Notation Conventions

### Safety Precautions


<b>1. Introduction</b> .....	12
<b>2. Component Names and Functions</b> .....	13
2.1 Main Components .....	13
2.2 Key Panel and Operation.....	14
2.3 Balance Display and Functions.....	15
<b>3. Specifications</b> .....	16
<b>4. Installation</b> .....	17
4.1 Installation Site.....	17
4.2 Unpacking and Delivery Inspection .....	18
4.3 Installation .....	20
4.4 Turning On the Power .....	22
4.5 Span Calibration.....	23
<b>5. Basic Operation</b>	
<b>(Read Chapters 1 to 5 for basic but proper operation of the balance.)</b> .....	25
5.1 Weighing.....	25
5.2 Changing the Unit Display.....	27
5.3 Switching the Weighing Range (CAUW-D series only) .....	27
5.4 For Stable Measurement in Semi-micro Range(CAUW-D series only) .....	28
<b>6. WindowsDirect Function</b> .....	30
6.1 What is WindowsDirect?.....	30
6.2 WindowsDirect Settings.....	30
6.2.1 Setting the Balance .....	30
6.2.2 Connecting the RS-232C Cable .....	31
6.2.3 Setting Up the Computer.....	32
6.2.4 Start and Checking Operation.....	34
6.3 Troubleshooting WindowsDirect Function.....	35
<b>7. Menu Item Selection</b> .....	37
7.1 What is a menu?.....	37
7.2 What is a menu map? .....	37
7.3 Menu Item Selection Procedures.....	38
7.4 Useful Functions Related to Menu .....	40
7.4.1 Settings Check Display .....	40

7.4.2 Returning to Default Settings (Menu reset) .....	40
7.4.3 Menu Lock .....	41
<b>8. Setting the Built-in Clock</b> <b>(CAUW-D/CAUW/CAUX series only) .....</b>	<b>42</b>
8.1 Date .....	42
8.2 Date Output Style .....	43
8.3 Time .....	44
<b>9. Display Settings .....</b>	<b>45</b>
9.1 Bar Graph Display .....	45
9.2 Changing the Minimum Display (CAUW/CAUX/CAUY series only) .....	46
9.3 Turning the Backlight On and Off (CAUW series only) (Not for CAUW-D) .....	47
<b>10. Calibration .....</b>	<b>48</b>
10.1 What is calibration? .....	48
10.1.1 The Necessity of Calibration .....	48
10.1.2 Types of Calibration .....	49
10.2 Executing Calibration .....	50
10.2.1 Span Calibration With Built-in Weight (CAUW-D/CAUW/CAUX series only) .....	50
10.2.2 Span Calibration With External Weights .....	51
10.2.3 Calibration Check With Built-in Weight (CAUW-D/CAUW/CAUX series only) .....	52
10.2.4 Calibration Check With External Weights .....	53
10.3 Calibration Settings .....	54
10.3.1 Selecting Preset Calibration Method .....	54
10.3.2 PSC Fully-automatic span calibration (CAUW-D/CAUW/CAUX series only) .....	55
10.3.3 Clock-CAL Fully-automatic span calibration (CAUW-D/CAUW series only) .....	57
10.3.4 PCAL: Calibration of the Built-in Weight (CAUW-D/CAUW/CAUX series only) .....	59
10.3.5 Inputting External Calibration Weight Value for E-CAL .....	60
10.3.6 Inputting External Calibration Weight Value for PCAL .....	61
10.4 For GLP/GMP/ISO Compliance .....	62
10.4.1 Calibration Report Setting .....	62
10.4.2 Balance ID Setting .....	63
10.4.3 Date Printout Setting .....	64

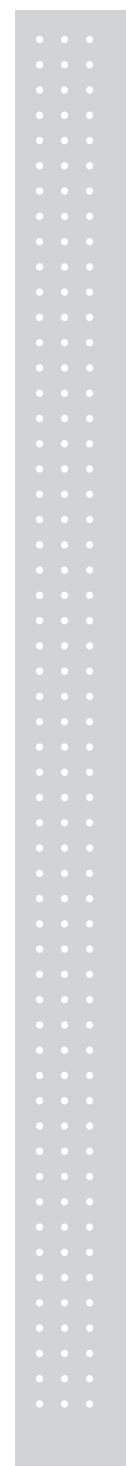

<b>11. Environment Settings</b> .....	65
11.1 What are environmental settings? .....	65
11.2 Settings for Stability and Response .....	65
11.2.1 Standard mode .....	65
11.2.2 Anti-convection mode .....	65
11.2.3 High-stability Mode.....	66
11.2.4 Pouring Mode (fast response).....	66
11.3 Stability Detection Band.....	68
11.4 Zero Tracking .....	69
<b>12. Units</b> .....	70
12.1 Setting Units of Measurement .....	70
12.2 Percentage (%) Conversion.....	72
<b>13. Application Functions</b> .....	73
13.1 Piece Counting (PCS).....	73
13.2 Solid Specific Gravity Measurement .....	74
13.3 Liquid Density Measurement .....	76
13.4 Auto Print .....	78
13.5 Interval Timer (CAUW-D/CAUW/CAUX series only).....	79
13.6 Add-on Mode.....	80
13.7 Formulation Mode.....	82
<b>14. Communication with Peripheral Devices</b> .....	85
14.1 Electronic Printer .....	85
14.2 Personal Computer - RS-232C .....	86
14.2.1 Connecting the Cable .....	86
14.2.2 Data Format .....	87
14.2.3 Command Codes .....	89
14.3 Communication Settings .....	91
14.3.1 What are communication settings? .....	91
14.3.2 Standard Setting.....	91
14.3.3 User Setting.....	92
14.4 Decimal Point Symbol in Output Data .....	95

<b>15. Maintenance and Transport</b> .....	96
15.1 Maintenance .....	96
15.2 Transport .....	98
<b>16. Troubleshooting</b> .....	99
16.1 Error Code Displays .....	99
16.2 Troubleshooting .....	100
<b>Appendices</b> .....	101
A-1. Menu map .....	101
A-2. Standard Accessories and Maintenance Parts List .....	105
A-3. Special Accessories (Options) List .....	105
A-4. Specifications for RS-232C Connector .....	106
A-5. Table of Unit Conversion Constants .....	107
A-6. Performance Check Guide .....	108
A-7. Below-weigh Hook Dimensions .....	110
A-8. Index .....	111

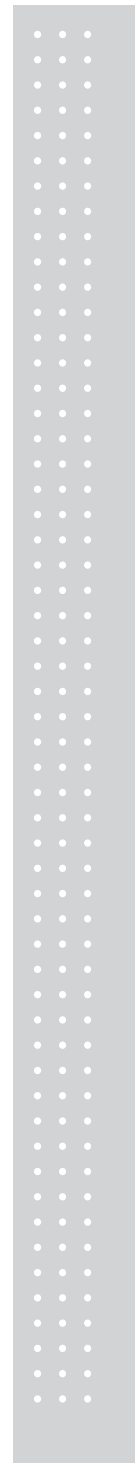

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/CAS/CAU Series User manual.html>

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)