



# ***CL5000 Series***

***(CL5000, CL5500)***


***Service Manual***

**(English)**


Rev. 2011. 04. 07

# Table of Contents

 1. Proper Operation .....	5
1.1 Introduction.....	5
1.2 Model and Specificationl .....	6
1.3 Environmental Conditions & Safety .....	7
1.4 Leveling and Footer Location.....	8
1.5 Power Outlet and Requirements.....	11
2. Classification.....	13
2.1 Scale Overview.....	13
2.2 Display and Indicators.....	15
2.3 Printer .....	17
2.4 Commuication .....	20
2.5 Key Pad.....	22
3. Getting Started .....	24
3.1 Sealing Method.....	24
3.2 Installation of the Label Roll.....	24
3.3 Turning Power On/Off.....	27
3.4 Program Menu and Tree.....	28
3.4.1 How to access PROGRAM MODE.....	28
3.4.2 Program Menu Tree .....	29
3.4.3 Calibration Menu Tree .....	31
4. Calibration Mode .....	32
4.1 Calibration.....	32
4.1.1 Span Calibration (Menu Code 8110).....	34
4.1.2 Span/Zero Fine Adjust (Menu Code 8120) .....	36
4.1.3 Capacity & Units (Menu Code 8130) .....	38
4.1.4 Gravity Constant (Menu Code 8140).....	39
4.1.5 Percent Calibration (Menu Code 8150).....	40
4.1.6 Linearity Adjust (Menu Code 8160).....	41
4.1.7 Zero & Tare Setting (Menu Code 8170).....	42
4.2 Factory Setting (Menu Code 8180).....	43
4.2.3 A/D Initialize (Menu Code 8183).....	43
4.2.4 Linearity Fine Adjust (Menu Code 8184).....	44
4.2.5 <i>Hysteresys Calibration</i> (Menu Code 8185).....	45
4.3 Memory Clear .....	47
4.3.1 Clear Report (Menu Code 8211) .....	47
4.3.2 Clear All PLU (Menu Code 8212).....	47
4.3.3 Clear All Table (Menu Code 8213) .....	47



- 4.3.4 Flash All Clear (Menu Code 8214)..... 47
- 4.4 Scale Type..... 48
- 4.5 Printer Hardware..... 49
  - 4.5.1 Print Mode (Menu Code 8310) ..... 49
  - 4.5.2 Label/Ticket Size (Menu Code 8320) ..... 49
  - 4.5.3 Sensor Calibration (Menu Code 8330)..... 50
  - 4.5.4 Sensor & Motor (Menu Code 8340)..... 50
  - 4.5.5 Print Intensity (Menu Code 8350)..... 50
  - 4.5.6 Adjust Feed Length (Menu Code 8360)..... 50
  - 4.5.7 Label Pre-print (Menu Code 8370)..... 50
  - 4.5.8 Printer Initialize (Menu Code 8380)..... 50
- 4.6 Network Options..... 51
  - 5.6.1 Enable Interface (Menu Code 8410) ..... 51
- 4.7 Self Test ..... 51
  - 4.7.1 Display Test (Menu Code 8510)..... 51
  - 4.7.2 A/D Test (Menu Code 8520) ..... 51
  - 4.7.3 Keyboard Test (Menu Code 8530)..... 52
  - 4.7.4 Chess Print (Menu Code 8540) ..... 53
  - 4.7.5 Printer Sensor Test (Menu Code 8550)..... 53
  - 4.7.6 Memory Information (Menu Code 8560)..... 54
  - 4.7.7 Firmware Version (Menu Code 8570)..... 54
- 5. Servicing & Parts Replacement ..... 55
  - 5.1 Platform Safety Overload Adjustment..... 57
  - 5.2 Removing the Upper Case ..... 59
  - 5.3 Main board Replacement..... 62
  - 5.4 Power Supply Replacement ..... 63
  - 5.5 Load Cell & AD Converter Replacement ..... 66
  - 5.6 Print Assembly Replacement..... 69
  - 5.7 Display Replacement..... 70
  - 5.8 Keyboard Replacement A,B(with/without breaking sealing) ..... 71
- 6. Installing Options..... 73
  - 6.1 Installing Ethernet Card..... 73
  - 6.2 Installing Wireless Lan Card..... 74
  - 6.3 Installing Memory Expansion Card ..... 74
- 7. Update..... 75
  - 7.1 F/W update (CL5000)..... 75
  - 7.2 F/W update (CL5500)..... 77
- 8. Schematic & Diagrams..... 78
  - 8.1.1 System Block Diagram (CL5000-B,P,R,G,S,H) ..... 78

 

- 8.1.2 System Block Diagram (CL5500-D) ..... 79
- 8.2.1 Connection Diagram (CL5000-B,P,R,G,S,H)..... 81
- 8.2.1 Connection Diagram (CL5500-D)..... 82
- 8.3 I/O Pin Connection (CL5000-B,P,R,G,S,H) ..... 84
- 8.3 I/O Pin Connection (CL5500-D) ..... 85
- 9. Exploded Views.....
- 9.1 Scale Assy (B,P,R,G-type) .....
- 9.2 Scale Assy (H-type) .....
- 9.3 Body Assy (B,P,R,G-type).....
- 9.4 Body Assy (H-type).....
- 9.5 Platform (B,P,R,G-type).....
- 9.6 Main Frame (H-type).....
- 9.7 I.O cover (H-Type) .....
- 9.8 Upper Case .....
- 9.9 Pole display (R-type).....
- 9.10 Pole display (P-type).....
- 9.11 Pole display (G-type).....
- 9.12 Printer Assembly.....
- 9.13 Printer Header Assemble .....
- 9.14 Cartridge .....
- 9.15 Tray assembly (B,P,R,G-type).....
- 9.16 Tray assembly (H-type).....
- 9.17 Lan card.....
- 9.18 Self-service Type.....
- 9.19 Double Body Type – (Head cover A’ssy).....
- 9.20 Double Body Type – (Cartridge A’ssy).....
- 9.21 Double Body Type – (Base bracket A’ssy).....
- 9.22 Double Body Type – (Door A’ssy).....
- 9.22 Double Body Type – (Head A’ssy) .....
- 9.23 Double Body Type – (Tray A’ssy).....
- 9.24 Double Body Type – (Upper A’ssy) .....
- 9.25 Double Body Type – (Platform A’ssy) .....
- 9.26 Double Body Type – (Body A’ssy) .....
- 10. Part List.....
- 10.1 Electronic.....
- 10.2 Mechanical.....
- 11. Revision.....

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*