

 
CL5000 Series

CL-Works V 1.30 Users Manual

Rev. 2007 09 26

- Table of Contents -

1. Software Installation	1
1.1. Using this Manual	1
1.2. Installation	1
1.2.1. Preparing to Install.....	1
1.2.2. Install Shield Wizard.....	2
1.2.3. Finishing the Installation	4
2. Starting the program	11
2.1. Setting environment	12
2.2. Setting communication.....	12
2.3. Setting file path	13
2.4. PLU Field selection.....	13
2.5. Scale configuration	14
3. PLU editor	15
3.1. Basics of PLU editor	15
3.2. Components of PLU editor.....	15
3.2.1. Field explanation	15
3.3. Programming PLU editor	17
3.3.1. Opening new work in PLU editor	17
3.3.2. Correct & add in PLU editor.....	17
3.3.3. Save & open PLU data.....	18
3.3.4. Dealing with Enter in PLU editor	19
3.3.5. Searching data	19
3.3.6. Viewing PLU type	19
3.3.7. Upload PLU	19
3.3.8. Downloading PLU	20
3.3.9. Deleting PLU.....	20
3.4. PLU editor reference	21
4. Discount.....	23
4.1. Discount information outline	23
4.2. Discount information formation	23
4.2.1. Edit discount information components.....	24
4.3. Instruction	24
4.3.1. Starting discount.....	25
4.3.2. Setting discount.....	25
4.3.3. Saving discount	25
4.3.4. Upload data.....	25
4.3.5. Download data.....	26



4.4. Discount reference table	26
5. Data Table I (PLU assist information I)	27
5.1. Data Table I formation	27
5.1.1. Table 1 Componets	27
5.2. Data Table I instruction	28
5.2.1. Starting new work	28
5.2.2. Edit & Add	28
5.2.3. Save data	30
5.2.4. Searching data	30
5.2.5. Delete data	30
5.2.6. upload data	31
5.2.7. Download	31
5.3. Assist information on Data Table I	31
5.3.1. Input field table.....	31
5.3.2. Precautions.....	32
6. Table2	33
6.1. Outline	33
6.2. Formation	33
6.2.1. Table 2 Componets	34
6.3. Instruction	35
6.3.1. Starting Table 2 information	35
6.3.2. Framing Table2 information	35
6.3.3. Save	35
6.3.4. Upload data	35
6.3.5. Download data	35
6.4. Table 2 reference	36
6.4.1. Input property table.....	36
6.4.2. Precaution	37
7. Store Data (PLU assist information III).....	38
7.1. Store data formation	38
7.1.1. Explanation and name	38
7.2. Store Data instruction.....	39
7.2.1. Starting a new work	39
7.2.2. Edit & Add	39
7.2.3. Save	39
7.2.4. Delete.....	40
7.2.5. Upload	40
7.2.6. Download data	40
7.2.7. Property table	42



- 7.2.8. Precautions 42
- 8. Report 44
 - 8.1. Outline 44
 - 8.2. Formation 44
 - 8.2.1. Names and Explaining 45
 - 8.3. Instruction 46
 - 8.3.1. Start seeing report 46
 - 8.3.2. Edit view report 48
 - 8.3.3. Save view report 48
 - 8.3.4. Upload data 48
 - 8.3.5. Download 49
 - 8.4. View Report reference 49
 - 8.4.1. Input property table 49
- 9. Label Editor 51
 - 9.1. Label Editor Outline 51
 - 9.2. Label editor formation 51
 - 9.3. Label editor instruction 52
 - 9.3.1. Starting label editor 52
 - 9.3.2. Start new job in label editor 52
 - 9.3.3. Add default field item on label editor 53
 - 9.3.4. Add fixed text item in label editor 53
 - 9.3.5. Add barcode item in label editor 53
 - 9.3.6. Add image item on label editor 53
 - 9.3.7. Add box/line item on label editor 53
 - 9.3.8. change string item type 54
 - 9.3.9. change barcode item type 55
 - 9.3.10. Changing image type 55
 - 9.3.11. Changing box, line type 56
 - 9.3.12. Select, make order, setting group, dismiss group 56
 - 9.3.13. Delete item 56
 - 9.4. Label editor reference 57
 - 9.4.1. label editor dialog image 57
 - 9.4.2. Attribute Table 61
 - 9.4.3. Field list 65
- 10. Key pad editor 70
 - 10.1. key pad editor outline 70
 - 10.2. Key pad editor formation 70
 - 10.2.1. Name and explanation 70
 - 10.3. Usage of keypad editor 72



- 10.3.1. Edit print screen 72
- 10.3.2. Edit function key 73
- 10.3.3. Open file..... 74
- 10.3.4. Make new file 74
- 10.3.5. Save data 74
- 10.3.6. Delete file 74
- 10.3.7. Upload data 75
- 10.3.8. Download data 75
- 10.4. Config outline 75
- 10.5. Config outline 75
 - 10.5.1. Scale Configuration 75
 - 10.5.2. Set Data File Path 78
 - 10.5.3. Field Select (PLU field Config) 79
 - 10.5.4. Communication Config 81
- 10.6. Config instruction 82
 - 10.6.1. Start Config 82
 - 10.6.2. Add & Edit 82
 - 10.6.3. Save data 82
 - 10.6.4. Upload Data 82
 - 10.6.5. Download data 82
- 11. Net Server..... 84
 - 11.1. Net Server Outline..... 84
 - 11.2. Net Server Formation..... 84
 - 11.2.1. Name and Explanation 84
 - 11.3. Net Server Instruction..... 85
 - 11.3.1. Start Net Server 85
 - 11.3.2. Add, edit & save data 85
 - 11.3.3. Delete Data..... 85
 - 11.3.4. Upload data 86
 - 11.3.5. Download data 86
 - 11.4. Net Server assist information 86
 - 11.4.1. Precautions 86

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/CAS/CL-Works Software users manual.html](https://the-checkout-tech.com/manuals/CAS/CL-Works%20Software%20users%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)