

 
# ***CL5000 Series***

## ***CL-Works V 1.30 Users Manual***

***Rev. 2007 09 26***

## - Table of Contents -

1. Software Installation .....	1
1.1. Using this Manual .....	1
1.2. Installation .....	1
1.2.1. Preparing to Install.....	1
1.2.2. Install Shield Wizard.....	2
1.2.3. Finishing the Installation .....	4
2. Starting the program .....	11
2.1. Setting environment .....	12
2.2. Setting communication.....	12
2.3. Setting file path .....	13
2.4. PLU Field selection.....	13
2.5. Scale configuration .....	14
3. PLU editor .....	15
3.1. Basics of PLU editor .....	15
3.2. Components of PLU editor.....	15
3.2.1. Field explanation .....	15
3.3. Programing PLU editor .....	17
3.3.1. Opening new work in PLU editor .....	17
3.3.2. Correct & add in PLU editor.....	17
3.3.3. Save & open PLU data.....	18
3.3.4. Dealing with Enter in PLU editor .....	19
3.3.5. Searching data .....	19
3.3.6. Viewing PLU type .....	19
3.3.7. Upload PLU .....	19
3.3.8. Downloading PLU .....	20
3.3.9. Deleteing PLU.....	20
3.4. PLU editor reference .....	21
4. Discount.....	23
4.1. Discount information outline .....	23
4.2. Discount information formation .....	23
4.2.1. Edit discount information components.....	24
4.3. Instruction .....	24
4.3.1. Starting discount.....	25
4.3.2. Setting discount.....	25
4.3.3. Saving discount .....	25
4.3.4. Upload data.....	25
4.3.5. Download data.....	26



4.4. Discount reference table .....	26
5. Data Table I (PLU assist information I) .....	27
5.1. Data Table I formation .....	27
5.1.1. Table 1 Componets .....	27
5.2. Data Table I instruction .....	28
5.2.1. Starting new work .....	28
5.2.2. Edit & Add .....	28
5.2.3. Save data .....	30
5.2.4. Searching data .....	30
5.2.5. Delete data .....	30
5.2.6. upload data .....	31
5.2.7. Download .....	31
5.3. Assist information on Data Table I .....	31
5.3.1. Input field table.....	31
5.3.2. Precautions.....	32
6. Table2 .....	33
6.1. Outline .....	33
6.2. Formation .....	33
6.2.1. Table 2 Componets .....	34
6.3. Instruction .....	35
6.3.1. Starting Table 2 information .....	35
6.3.2. Framing Table2 information .....	35
6.3.3. Save .....	35
6.3.4. Upload data .....	35
6.3.5. Download data .....	35
6.4. Table 2 reference .....	36
6.4.1. Input property table.....	36
6.4.2. Precaution .....	37
7. Store Data (PLU assist information III).....	38
7.1. Store data formation .....	38
7.1.1. Explanation and name .....	38
7.2. Store Data instruction.....	39
7.2.1. Starting a new work .....	39
7.2.2. Edit & Add .....	39
7.2.3. Save .....	39
7.2.4. Delete.....	40
7.2.5. Upload .....	40
7.2.6. Download data .....	40
7.2.7. Property table .....	42



- 7.2.8. Precautions .....42
- 8. Report ..... 44
  - 8.1. Outline ..... 44
  - 8.2. Formation ..... 44
    - 8.2.1. Names and Explaining..... 45
  - 8.3. Instruction ..... 46
    - 8.3.1. Start seeing report ..... 46
    - 8.3.2. Edit view report ..... 48
    - 8.3.3. Save view report..... 48
    - 8.3.4. Upload data..... 48
    - 8.3.5. Download..... 49
  - 8.4. View Report reference ..... 49
    - 8.4.1. Input property table ..... 49
- 9. Label Editor ..... 51
  - 9.1. Label Editor Outline ..... 51
  - 9.2. Label editor formation ..... 51
  - 9.3. Label editor instruction..... 52
    - 9.3.1. Starting label editor..... 52
    - 9.3.2. Start new job in label editor..... 52
    - 9.3.3. Add default field item on label editor..... 53
    - 9.3.4. Add fixed text item in label editor ..... 53
    - 9.3.5. Add barcode item in label editor ..... 53
    - 9.3.6. Add image item on label editor..... 53
    - 9.3.7. Add box/line item on label editor ..... 53
    - 9.3.8. change string item type ..... 54
    - 9.3.9. change barcode item type ..... 55
    - 9.3.10. Changing image type ..... 55
    - 9.3.11. Changing box, line type..... 56
    - 9.3.12. Select, make order, setting group ..... 56
    - 9.3.13. Delete item ..... 56
  - 9.4. Label editor reference ..... 57
    - 9.4.1. label editor dialog image ..... 57
    - 9.4.2. Attribute Table ..... 61
    - 9.4.3. Field list..... 65
- 10. Key pad editor..... 70
  - 10.1. key pad editor outline ..... 70
  - 10.2. Key pad editor formation ..... 70
    - 10.2.1. Name and explanation ..... 70
  - 10.3. Usage of keypad editor..... 72



- 10.3.1. Edit print screen ..... 72
- 10.3.2. Edit function key ..... 73
- 10.3.3. Open file..... 74
- 10.3.4. Make new file ..... 74
- 10.3.5. Save data ..... 74
- 10.3.6. Delete file ..... 74
- 10.3.7. Upload data ..... 75
- 10.3.8. Download data ..... 75
- 10.4. Config outline ..... 75
- 10.5. Config outline ..... 75
  - 10.5.1. Scale Configuration ..... 75
  - 10.5.2. Set Data File Path ..... 78
  - 10.5.3. Field Select (PLU field Config) ..... 79
  - 10.5.4. Communication Config ..... 81
- 10.6. Config instruction ..... 82
  - 10.6.1. Start Config ..... 82
  - 10.6.2. Add & Edit ..... 82
  - 10.6.3. Save data ..... 82
  - 10.6.4. Upload Data ..... 82
  - 10.6.5. Download data ..... 82
- 11. Net Server..... 84
  - 11.1. Net Server Outline..... 84
  - 11.2. Net Server Formation..... 84
    - 11.2.1. Name and Explanation ..... 84
  - 11.3. Net Server Instruction..... 85
    - 11.3.1. Start Net Server ..... 85
    - 11.3.2. Add, edit & save data ..... 85
    - 11.3.3. Delete Data..... 85
    - 11.3.4. Upload data ..... 86
    - 11.3.5. Download data ..... 86
  - 11.4. Net Server assist information ..... 86
    - 11.4.1. Precautions ..... 86

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*