




Owner's Manual

CUW, CUX SERIES

Balance Scale

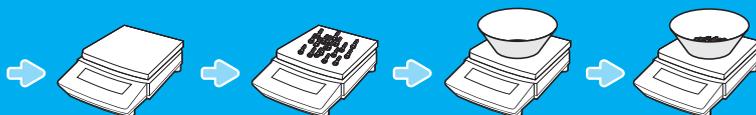

Notation Conventions

Safety Precautions

1. Introduction	11
2. Name and Function of Components	12
2.1 Components.....	12
2.2 Key Panel and Operation.....	14
2.3 Balance Display and Function	15
3. Specifications	16
4. Installation	17
4.1 Choosing the Installation Site.....	17
4.2 Unpacking and Delivery Inspection	19
4.3 Installation	22
4.4 Turning ON the Power.....	27
4.5 Span Calibration.....	28
5. Basic Operation	30
5.1 Weighing.....	30
5.2 Changing the Unit Display	31
6. WindowsDirect Function	32
6.1 Introduction: Experience it!.....	32
6.2 Set Up WindowsDirect.....	32
6.2.1 Setting Up the Balance	32
6.2.2 Cable Connection.....	33
6.2.3 Setting Up the Computer.....	33
6.2.4 Start and Checking Operation	35
6.3 Troubleshooting	36

7. Menu Item Selection	38
7.1 What is the Menu?	38
7.2 Menu Map	38
7.3 Menu Item Selection Procedure.....	39
7.4 Setting Numeric Values	41
7.5 Related Useful Functions	42
7.5.1 Last Menu Recall.....	42
7.5.2 Returning to the Default Settings (menu reset).....	42
7.5.3 Menu Lock.....	43
8. Built-in Clock Set-up	44
8.1 Date.....	44
8.2 Date Output Style.....	44
8.3 Time.....	45
8.4 Setting Display During Stand-by	45
9. Display Selection	46
9.1 Bar graph display	46
9.2 Changing the Minimum Display Digit (10d:1d)	46
10. Calibration	47
10.1 What is calibration?	47
10.2 Calibration Execution.....	48
10.2.1 Span Calibration Using the Built-in Weight (UW Series Only).....	48
10.2.2 Calibration Check Using the Built-in Weight (UW Series Only)	49
10.2.3 Span Calibration Using External Weights	50
10.2.4 Calibration Check Using External Weights	51
10.3 Calibration Setting	52
10.3.1 Selecting the Calibration Type.....	52
10.3.2 PSC Fully-automatic Calibration (UW series only).....	52
10.3.3 Clock-CAL Fully-automatic Calibration (UW series only)	53
10.3.4 PCAL: Calibration of the Built-in Weight (UW series only)	54
10.3.5 PCAL Password Setting (UW series only).....	55
10.4 For GLP/GMP/ISO Conformance	56
10.4.1 Calibration Report Setting.....	56
10.4.2 Balance ID Setting.....	56

11. Environment	57
11.1 Overview	57
11.2 Stability and Response (Averaging).....	57
11.3 Stability Detection Settings	58
11.3.1 What is Stability Detection?.....	58
11.3.2 Stability Detection Band.....	59
11.3.3 Timing of Stability Mark Illumination and Linked Operation.....	60
11.4 Tracking.....	60
12. Units	61
12.1 Unit Display Set-up	61
12.2 Percentage (%) Conversion.....	62
13. Enhancing Productivity	63
13.1 Checkweighing and Target Display.....	63
13.1.1 Checkweighing (Comparator) Display Type 1.....	64
13.1.2 Checkweighing (Comparator) Display Type 2.....	64
13.1.3 Target Mode	65
13.2 Piece Counting (PCS).....	66
13.3 Auto Print.....	67
13.4 Auto Zero.....	69
13.5 Zero Range.....	70
13.6 Taring/Printing at Stability.....	71
13.7 Pretaring Value	72
14. Application Functions	73
14.1 Solid Specific Gravity Measurement.....	73
14.2 Liquid Density Measurement.....	75
14.3 Peak Hold.....	77
14.4 Interval Timer.....	79
14.5 Add-on Mode.....	80
14.6 Animal Weighing.....	82
14.7 Formulation Mode.....	85

15. Connecting Peripheral Instruments	87
15.1 Electronic Printer	87
15.2 Personal Computer - RS-232C -	88
15.2.1 Connecting the Cable	88
15.2.2 Data Format	89
15.2.3 Using Command Codes	91
15.2.4 Multi-Connection Mode	96
15.3 Communication Setting	99
15.3.1 Overview	99
15.3.2 Handshaking	99
15.3.3 Format	100
15.3.4 Communication Speed	100
15.3.5 Parity / Bit Length	100
15.3.6 Stop Bit	100
15.3.7 Delimiter	101
15.4 Decimal Point Symbol in Output Data	101
16. Maintenance and Transportation	102
16.1 Maintenance	102
16.2 Moving the Balance	102
17. Troubleshooting	103
17.1 General Display	103
17.2 Error Display	104
17.3 Troubleshooting	105
17.4 LCD (Liquid Crystal Display) Check	105
Appendices	106
A-1. Menu Map	106
A-2. Standard Accessories and Maintenance Parts List	111
A-3. Optional Accessories List	112
A-4. Specifications of Connectors	113
A-5. Table of Unit Conversion Constants	114
A-6. Performance Checks	115
A-7. Below-Weigh Hook Dimensions	116
A-8. Notes on WindowsDirect	117
A-9. Index	119

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*