
DB-1H SERIES

SERVICE MANUAL

C A S CORPORATION

THE CONTENTS

CHAPTER-I THE GENERAL INTRODUCTIONS

A... PREFACE	4
B... THE PRECAUTIONS	4
C... THE SPECIFICATIONS	5
D... SEALING METHOD	5

CHAPTER-II THE CALIBRATIONS

A... SET THE CALIBRATION MODE	6
B... THE MODES	7
B.1... THE MODE 1	8
B.2... THE MODE 2	8
B.3... THE MODE 3	8
B.4... THE MODE 4	8
B.5... THE MODE 5	8
C... THE SPAN CALIBRATION	9
C.1... SET THE CALIBRATION MODE	9
C.2... ENTRY OF THE MODE 4	9
C.3... SPAN CALIBRATION	10
C.4... CONFIRMATION OF THE SPAN	10
D... THE SPAN CALIBRATION FROM THE REPAIR	11
D.1... SET THE CALIBRATION MODE	11
D.2... CHECK THE INITIAL ZERO AND SPAN	11
D.3... THE SPAN CALIBRATION	11
D.4... CONFIRMATION OF THE SPAN	12
E... THE SPAN CALIBRATION WITH A PARTIAL LOAD	13
E.1... SET THE CALIBRATION MODE	13
E.2... ENTRY OF A PARTIAL CALIBRATION	13
E.3... INPUT OF A PARTIAL LOAD BY PERCENTAGE	13
E.4... THE SPAN CALIBRATION	14
E.5... CONFIRMATION OF THE SPAN	14

CHAPTER-III THE PART REPLACEMENTS

A... REPLACEMENT OF THE LOAD CELL	15
A.1... REPLACEMENT OF THE LOAD CELL	15
A.2... CORRECTION OF THE ECCENTRICITY	15
A.3... THE SPAN CALIBRATION	15
B... REPLACEMENT OF THE ANALOG MODULE	16
B.1... REPLACEMENT OF THE ANALOG MODULE	16
B.2... THE SPAN CALIBRATION FOR THE ANALOG MODULE	16
C... REPLACEMENT OF THE DIGITAL MODULE	16
C.1... REPLACEMENT OF THE DIGITAL MODULE	16
C.2... THE INPUTS FOR THE DIGITAL MODULE	16

CHAPTER-IV THE TRANSFORMER

A... THE TRANSFORMER	17
----------------------------	----

CHAPTER-V THE SCHEMATICS AND THE DIAGRAMS

A....MAIN CIRCUIT DIAGRAM	19
B....WIRING DIAGRAM	20
C....PARTS LOCATION	21

CHAPTER-VI THE ERROR MESSAGES

A....THE ERROR MESSAGES	22
A.1..ERR 1	22
A.2..ERR 2	22
A.3..ERR 10	22
A.4..ERR 11	22
A.5..ERR 12	22
A.6..ERR 13	22

CHAPTER-VII THE OTHERS

A....FOR THE SERIAL INTERFACE	23
A.1..THE COMMUNICATION AGREEMENTS	23
A.2..THE WIRE CONNECTIONS	23
A.3..THE PROTOCOL	24
A.4..THE DATA TRAINS	24
B....EXPLODED VIEW	25
B....FULL PARTS LIST	27

CHAPTER-VIII APPENDIX-I

A....INPUT CODES FOR THE DIGITAL MODULE	31
A.1 THE ALTERNATIVE KEY FUNCTIONS	31
A.2 INPUT FOR WEIGH CONDITION CODES	31
A.3 THE SPAN CALIBRATION	32

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*