
DB-1H SERIES

SERVICE MANUAL

C A S CORPORATION

THE CONTENTS

CHAPTER-I THE GENERAL INTRODUCTIONS

| | |
|-------------------------------|---|
| A... PREFACE | 4 |
| B... THE PRECAUTIONS | 4 |
| C... THE SPECIFICATIONS | 5 |
| D... SEALING METHODD | 5 |

CHAPTER-II THE CALIBRATIONS

| | |
|---|----|
| A... SET THE CALIBRATION MODE | 6 |
| B... THE MODES | 7 |
| B.1... THE MODE 1 | 8 |
| B.2... THE MODE 2 | 8 |
| B.3... THE MODE 3 | 8 |
| B.4... THE MODE 4 | 8 |
| B.5... THE MODE 5 | 8 |
| C... THE SPAN CALIBRATION | 9 |
| C.1... SET THE CALIBRATION MODE | 9 |
| C.2... ENTRY OF THE MODE 4 | 9 |
| C.3... SPAN CALIBRATION | 10 |
| C.4... CONFIRMATION OF THE SPAN | 10 |
| D... THE SPAN CALIBRATION FROM THE REPAIR | 11 |
| D.1... SET THE CALIBRATION MODE | 11 |
| D.2... CHECK THE INITIAL ZERO AND SPAN | 11 |
| D.3... THE SPAN CALIBRATION | 11 |
| D.4... CONFIRMATION OF THE SPAN | 12 |
| E... THE SPAN CALIBRATION WITH A PARTIAL LOAD | 13 |
| E.1... SET THE CALIBRATION MODE | 13 |
| E.2... ENTRY OF A PARTIAL CALIBRATION | 13 |
| E.3... INPUT OF A PARTIAL LOAD BY PERCENTAGE | 13 |
| E.4... THE SPAN CALIBRATION | 14 |
| E.5... CONFIRMATION OF THE SPAN | 14 |

CHAPTER-III THE PART REPLACEMENTS

| | |
|---|----|
| A... REPLACEMENT OF THE LOAD CELL | 15 |
| A.1... REPLACEMENT OF THE LOAD CELL | 15 |
| A.2... CORRECTION OF THE ECCENTRICITY | 15 |
| A.3... THE SPAN CALIBRATION | 15 |
| B... REPLACEMENT OF THE ANALOG MODULE | 16 |
| B.1... REPLACEMENT OF THE ANALOG MODULE | 16 |
| B.2... THE SPAN CALIBRATION FOR THE ANALOG MODULE | 16 |
| C... REPLACEMENT OF THE DIGITAL MODULE | 16 |
| C.1... REPLACEMENT OF THE DIGITAL MODULE | 16 |
| C.2... THE INPUTS FOR THE DIGITAL MODULE | 16 |

CHAPTER-IV THE TRANSFORMER

| | |
|----------------------------|----|
| A... THE TRANSFORMER | 17 |
|----------------------------|----|

CHAPTER-V THE SCHEMATICS AND THE DIAGRAMS

| | |
|---------------------------------|----|
| A....MAIN CIRCUIT DIAGRAM | 19 |
| B....WIRING DIAGRAM | 20 |
| C....PARTS LOCATION | 21 |

CHAPTER-VI THE ERROR MESSAGES

| | |
|-------------------------------|----|
| A....THE ERROR MESSAGES | 22 |
| A.1..ERR 1 | 22 |
| A.2..ERR 2 | 22 |
| A.3..ERR 10 | 22 |
| A.4..ERR 11 | 22 |
| A.5..ERR 12 | 22 |
| A.6..ERR 13 | 22 |

CHAPTER-VII THE OTHERS

| | |
|---|----|
| A....FOR THE SERIAL INTERFACE | 23 |
| A.1..THE COMMUNICATION AGREEMENTS | 23 |
| A.2..THE WIRE CONNECTIONS | 23 |
| A.3..THE PROTOCOL | 24 |
| A.4..THE DATA TRAINS | 24 |
| B....EXPLODED VIEW | 25 |
| B....FULL PARTS LIST | 27 |

CHAPTER-VIII APPENDIX-I

| | |
|---|----|
| A....INPUT CODES FOR THE DIGITAL MODULE | 31 |
| A.1 THE ALTERNATIVE KEY FUNCTIONS | 31 |
| A.2 INPUT FOR WEIGH CONDITION CODES | 31 |
| A.3 THE SPAN CALIBRATION | 32 |

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/CAS/DB-1H Series Service manual.html](https://the-checkout-tech.com/manuals/CAS/DB-1H%20Series%20Service%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)