



# **DB-II SERVICE MANUAL**

( NTEP)

## < Table of Contents >

1. Introductions.....	3
1.1. The Preface.....	3
1.2. Precautions.....	3
1.3. Specifications .....	4
1.4. Sealing Method.....	5
2. Calibration .....	6
2.1. General Calibration.....	6
2.1 How to Go to Normal mode(C - 0) .....	7
2.2 How to Confirm Span Calibrated A/D Value(C - 1).....	7
2.3 Key Test (C - 2).....	8
2.4 Span Calibration(C - 3) .....	8
2.5 How to Confirm Real A/D value(C - 5) .....	9
2.6 How to Confirm Averaging A/D value(C - 6) .....	9
2.7 % Calibration(C - 7).....	9
2.8 Gravity Constant(C - 9).....	10
3. The Schematics and Diagram .....	11
3.1. System Block Diagram.....	11
3.2. Circuit Diagram .....	12
3.2.1. VFD Version .....	12
3.2.1.1. Main.....	12
3.2.1.2. Power .....	13
3.2.1.3. Analog to Digital Module.....	14
3.3. Wiring Diagram.....	15
3.3.1. VFD Version .....	15
3.4. Part Location.....	16
3.4.1. VFD Version .....	16
3.5. Exploded View.....	17
4. Error Message.....	19
5. Serial Interface.....	20
6. Parts List.....	21
6.1. VFD Main PCB Ass'y.....	21

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/CAS/DB-II NTEP service and calibration manual>.

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)