



DL-N SERVICE MANUAL

< Table of Contents >

1. Introduction	4
1.1. Preface	4
1.2. Precaution	4
1.3. Specifications	5
1.3.1. DLN Specifications	5
1.4. Key	5
1.5. Sealing Method	6
2. Calibration	7
2.1. General Calibration	7
2.1.1. C4 Setting	8
2.1.1.1. C4-1 Setting	8
2.1.1.2. C4-2 Setting	8
2.1.1.3. C4-3 Setting	8
2.1.1.4. C4-4 Setting	9
2.1.1.4. C4-5 Setting	9
2.1.1.6. C4-6 Setting	9
2.1.2. SPAN Calibration Setting (C-3)	10
2.1.3. Percent SPAN Calibration Setting (C-7)	10
2.1.4. Gravity Constant Value Setting (C-9)	10
2.1.5. Displaying Real A/D Value (C-5)	11
2.1.6. How to confirm SPAN calibrated A/D value (C-1)	11
2.1.7. To delete the linearity calibration value(C-6)	11
2.1.8. Back to the normal weighing mode (C-0)	12
2.1.9. Calibration Block Diagram	13
3. The Schematics and Diagram	14
3.1. System Block Diagram	14
3.2. Circuit Diagram	15
3.2.1. Main	15
3.2.2. A/D	16
3.2.3. POWER	17
3.2.4. CALIBRATION	18
4. Exploded View	19
5. Part Location	20
5.1. Main PCB	20

5.2. ANALOG PCB	21
6. Error Messages & Solution	22
6.1. Beep: Re-zero	22
6.2. Err: Initial Zero	22
6.3. Init: Failure of Analog Module	22
6.4. UNSTA: A/D Value Unstable	22

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*