



EB SERVICE MANUAL

< Table of Contents >

1.	Introduction	4
	1.1. Preface	4
	1.2. Precaution	4
	1.3. Specifications	5
	1.4. Dimension.....	6
	1.5. Key & SYMBOLS ON DISPLAY	7
	1.6. Sealing Method.....	9
2.	Calibration	11
	2.1. General Calibration.....	11
	2.1.1. C4 Setting	12
	2.1.1.1. C4-1 Setting.....	12
	2.1.1.2. C4-2 Setting.....	12
	2.1.1.3. C4-3 Setting.....	12
	2.1.1.4. C4-4 Setting.....	13
	2.1.1.5. C4-5 Setting.....	13
	2.1.2. SPAN Calibration Setting (C-3)	14
	2.1.3. Gravity Constant Value Setting (C-9)	14
	2.1.4. Calibration factor Setting (C-10).....	15
	2.1.5. Displaying Real A/D Value (C-5)	15
	2.1.6. Input Function Key Code (C-6)	16
	2.1.7. Percent Calibration (C-7)	17
	2.1.8. Battery Calibration (C-8)	17
3.	The Schematics and Diagram.....	18
	3.1. System Block Diagram.....	18
	3.2. Circuit Diagram	19
	3.2.1. Main and Power.....	19
	3.2.2. Display part	20
	3.2.3. Key Part	21
4.	Exploded View.....	22
5.	Load Cell drawing.....	23
6.	Part Location.....	24
	6.1. Main PCB (Top)	24
	6.2. Main PCB (Bottom)	25
	6.3. Rear Display PCB (Top)	26

6.4.	Rear Display PCB (Bottom).....	26
6.5.	Terminal PCB (Top)	27
6.6.	Terminal PCB (Bottom)	27
6.7.	Cal PCB (Top)	28
7.	Error Messages & Solution.....	29
8.	Part List.....	30

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/CAS/EB service and calibration manual.html](https://the-checkout-tech.com/manuals/CAS/EB%20service%20and%20calibration%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)