



EC Series

User manual

Table Of Contents

I .	Precautions Before Using The Scale-----	1
II.	Explanation Of Display Symbols-----	2
III.	Keypad Functions-----	4
IV.	Operations-----	5
	(I) Switch on & off-----	5
	(II) Zero the scale -----	5
	(III) Sampling before counting-----	5
	(IV) Preset unit weight in numeric keys -----	8
	(V) Subtract container's weight-----	9
	(VI) Weight/Quantity accumulation-----	14
	(VII) Preset counting check range-----	16
	(VIII) Preset weight check range-----	18
IV.	User Programming Functions-----	20
	(I) Auto. shut off time span-----	20
	(II) Zero Tracking Range-----	21
	(III) Zero display range-----	22
	(IV) Stable class range-----	23
	(V) Stable class rate -----	24
	(VI) Backlight type-----	25
	(VII) Change unit of measure from kg/g to Pound-----	26
	(VIII) Unit weight recomputing-----	27
	(IX) Check alarm type-----	28
	(X) Baud Rate setting-----	31
	(XI) Transmit method setting-----	32
	(XII) Label format setting (available when a label printer is connected.)-----	33
	(XIII) Cancel Tare setting-----	34
VI.	Calibration (can only be done in kg)-----	35
VII.	Power supply & battery operation-----	36
VIII.	RS-232 Output-----	37
IX.	Error Codes-----	40
X.	Technical Data-----	41

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/CAS/EC Series owners manual.html](https://the-checkout-tech.com/manuals/CAS/EC%20Series%20owners%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)