

CAS EC-2 Series

User manual

Table Of Contents

Ι.	Precautions Before Using The Scale	- 1
II.	Overall View	- 2
	(I) Package Contents	- 2
	(II)Overall View	- 2
III.	Explanation Of Display Symbols	- 3
IV.	Keypad Functions	- 5
٧.	Connection Description	- 6
	(I) Remote port	- 6
	(II) Extra display/Control box port	
	(III) RS-232 output port	
VI.	Operations	
	(I)Switch on & off	
	(II) Zero the scale	
	(III) Sampling before counting	- 10
	(IV) Counting by using reduction unit weight	
	()/ Storing PLU (Price Look Up) to Memory	- 15
	(VI) Subtract container's weight	- 25
	(VII) Weight/Quantity accumulation	- 28
	(VIII) Preset counting check range	- 30
	(IX) Preset weight check range	
	(X) Change platform	
VII.	User Programming Functions	
	(I) Auto. shut off time span	
	(II) Backlight type	
	(III) Change unit of measure from kg/g to Pound	
	(IV) Unit weight recomputing	
	` '	
		- 42
		/13
	,	
	(V) Transmit method setting (VI) Baud Rate setting (VII) Label format setting (available when a label printer is connected.) (VIII)Check alarm type	- 42 - 43

	(IX) Cancel Tare setting	47
	(X) Remote platform setting	48
	(XI) Three section control signal	49
	(XII) Transmit method of extra display	50
	(XIII) Baud rate setting of extra display	51
	(IXV)Zero Tracking Range	52
	(XV)Zero display range	53
	(XVI)Stable class range	54
	(XVII)Stable class rate	55
VIII.	Calibration (can only be done in kg/lb)	56
IX.	Power supply & battery operation	58
Χ.	RS-232 Output	59
XI.	Error Codes	66
XII.	Technical Data	67

This is a "Table of Contents preview" for quality assurance

The full manual can be purchased from our store:

https://the-checkout-tech.com/manuals/CAS/EC-2 Series owners manual.html

And our free Online Keysheet maker:

https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/

HTTPS://THE-CHECKOUT-TECH.COM