



ED SERVICE MANUAL

< Table of Contents >

1.	Introduction.....	4
1.1.	Preface	4
1.2.	Precaution	4
1.3.	Specification.....	5
1.4.	Sealing Method.....	6
2.	Calibration	6
2.1.	General Calibration	6
2.1.1.	C4 Setting	6
2.1.1.1.	C4-1 Setting.....	6
2.1.1.2.	C4-2 Setting.....	6
2.1.1.3.	C4-3 Setting.....	6
2.1.1.4.	C4-4 Setting.....	6
2.1.1.5.	C4-5 Setting.....	6
2.1.2.	SPAN Calibration Setting (C-3).....	6
2.1.3.	Gravity Constant Value Setting (C-9).....	6
2.1.4.	Calibration factor Setting (C-10).....	6
2.1.5.	Displaying Real A/D Value (C-5).....	6
2.1.6.	Percent Calibration (C-7)	6
2.1.7.	Battery Calibration (C-8)	6
3.	The Schematics and Diagram	6
3.1.	System Block Diagram	6
3.2.	Circuit Diagram.....	6
3.2.1.	MAIN.....	6
3.2.2.	DISPLAY & MODULE.....	6
4.	Exploded View	6
5.	Load Cell drawing	6
6.	Part Location	6
	Main PCB Part Location	6
	COMMON PCB.....	6
	RS-232 MODULE PCB Part Location	6
	RS-232 PCB (TOP).....	6
	RS-232 PCB (BOTTOM)	6
	KEY PCB Part Location	6
	KEY PCB.....	6
7.	Error Messages & Solution.....	6

8. Part List.....6

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*